

WIRING DIAGRAMS

Article Text

1990 Mitsubishi Galant

ARTICLE BEGINNING

1990 Wiring Diagrams
Mitsubishi

Galant

COMPONENT LOCATION MENU

COMPONENT LOCATIONS TABLE

Component	(Figure No.) Location
A/C SYSTEM	10 (A-B 36-39)
ABS CONTROL UNIT (2WD)	7 (A-B 24)
ABS CONTROL UNIT (4WD)	7 (D-E 24)
ABS HYDRAULIC UNIT (2WD)	7 (A-B 27)
ABS HYDRAULIC UNIT (4WD)	7 (D-E 27)
ABS POWER RELAY (2WD)	7 (C 27)
ABS POWER RELAY (4WD)	7 (D 27)
ABS PRES SW (4WD)	7 (D 27)
ALTERNATOR	1 (D 3)
ALTERNATOR RELAY	1 (E 3)
ANTENNA RELAY	12 (A 46)
AUTO SEAT BELTS	8 (D-E 28-31)
BACK-UP LT SW (M/T)	9 (D 32)
BATTERY	1 (A 2)
CIG LIGHTER	8 (C 28)
CLOCK	11 (D 40)
COLUMN SW	10 (E 36-39)
COMP RELAY	6 (A 21)
CONDENSER FAN RLY (HI)	4 (A 14)
CONDENSER FAN RLY (LO)	4 (A 14)
CRUISE CONTROL DIODE	9 (A 33)
CRUISE CONTROL SW (COLUMN SW)	9 (A 33-34)
CRUISE CONTROL UNIT	9 (B 32)
DEFOG RELAY	11 (E 41)
DEFOG SW	11 (E 41)
DIAG CONN (2.0L DOHC)	3 (E 6)
DIAG CONN (2.0L SOHC)	3 (E 11)
DIR/HAZ FLASHER	10 (B 37)
DOME LT	8 (C 28)
DOME LT & SUNROOF SW	8 (A 28)
DOOR SWS & LTS	8 (B-C 29-31)
ECS CONTROL UNIT	6 (B-E 20)
ECS INDICATORS	6 (C-E 23)
ECS POWER RELAY	6 (B 23)
ELECT A/T CONTROL SYS	9 (A-B 35)
ELECT POWER STEERING	9 (A-B 35)
ENGINE COOLANT TEMP SW (2.0L DOHC)	2 (A 7)
ENGINE FUSE/RELAY (F/R) BOX	4 (B-E 13, 15)
ETACS CONTROL UNIT	10 (B-C 36)

WIRING DIAGRAMS

 
Article Text (p. 2)

1990 Mitsubishi Galant

FUEL PUMP GAUGE UNIT (4WD)	11 (B 43)
FUS LINK BOX	1 (B 3)
HAZARD SW	10 (C 38)
HEATER CONTROL ILLUM LIGHT	8 (C 30)
IGNITION COIL (2.0L DOHC)	2 (D 4)
IGNITION COIL (2.0L SOHC)	3 (D 8)
ILLUM LTS	8 (D 28)
INHIBITOR SW A/T)	9 (D 32)
INSTRUMENT CLUSTER	11 (A-C 40-43)
JUNCTION BLOCK (J/B)	5 (A-C 16-18)
JUNCTION CONNS	11 (D 42-43)
MPI CONTROL RLY 2.0L DOHC)	2 (B 4)
MPI CONTROL RLY (2.0L SOHC)	3 (E 8)
MPI CTRL UNIT (DOHC)	2 (A 4-7)
MPI CTRL UNIT SOHC)	3 (A 8-11)
POWER DOOR LOCKS	12 (A-B 44-45)
POWER MIRROR	12 (C 44-45)
POWER TRANSISTOR (2.0L DOHC)	2 (E 4)
POWER WINDOWS	12 (D-E 44-46)
STARTER MOTOR	1 (C 3)
STARTER RELAY (M/T)	1 (D 3)
STOP LT SW (W/CRUISE CONTROL)	8 (A 32)
STOP LT SW (W/O CRUISE CONTROL)	12 (C 47)
SUNROOF POWER RELAY	8 (B 28)
THROTTLE POSITION SENSOR	
2.0L DOHC	3 (C 7)
2.0L SOHC	3 (B 11)
VANITY MIRROR LT	8 (A 30)
WIPER SYSTEM	10 (C-E 39)

WIRING DIAGRAMS

1990 Mitsubishi Galant



WIRING DIAGRAMS

Article Text (p. 4)

1990 Mitsubishi Galant

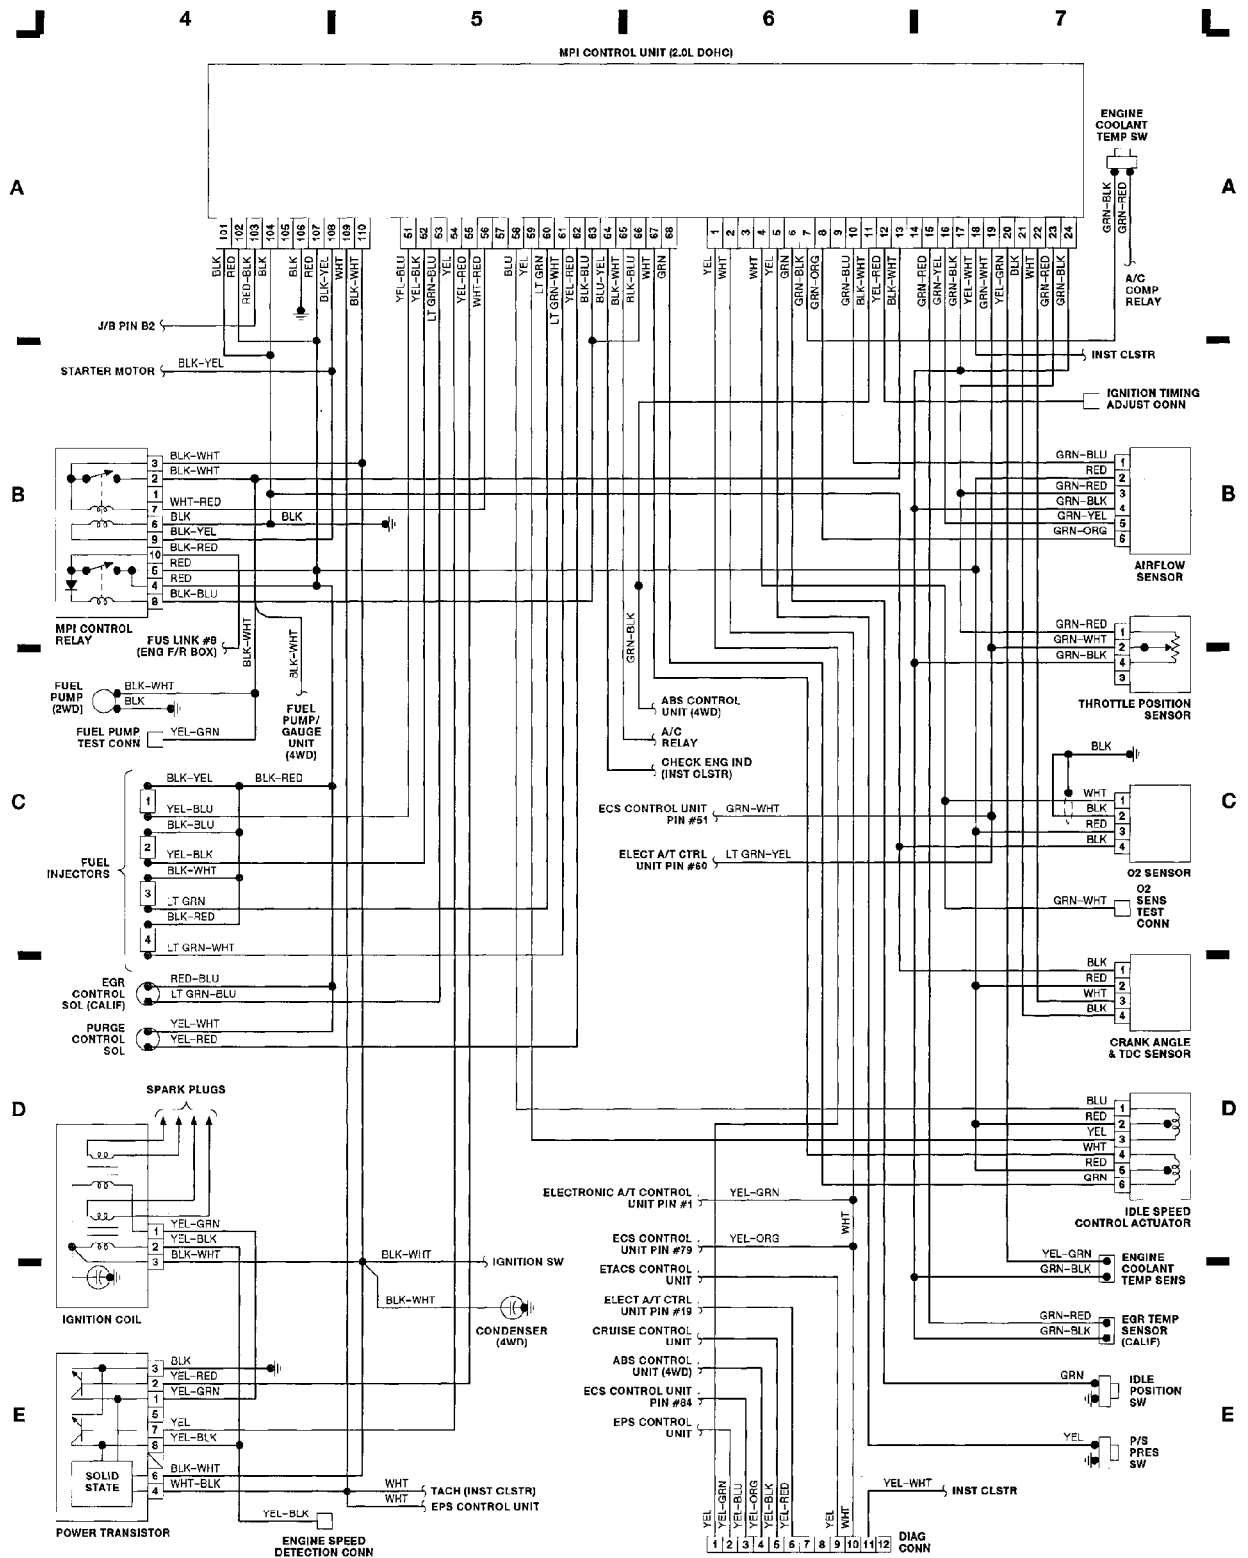


Fig. 2: Computer Engine Control (2.0L DOHC) (Grid 4-7)

WIRING DIAGRAMS

Article Text (p. 5)

1990 Mitsubishi Galant

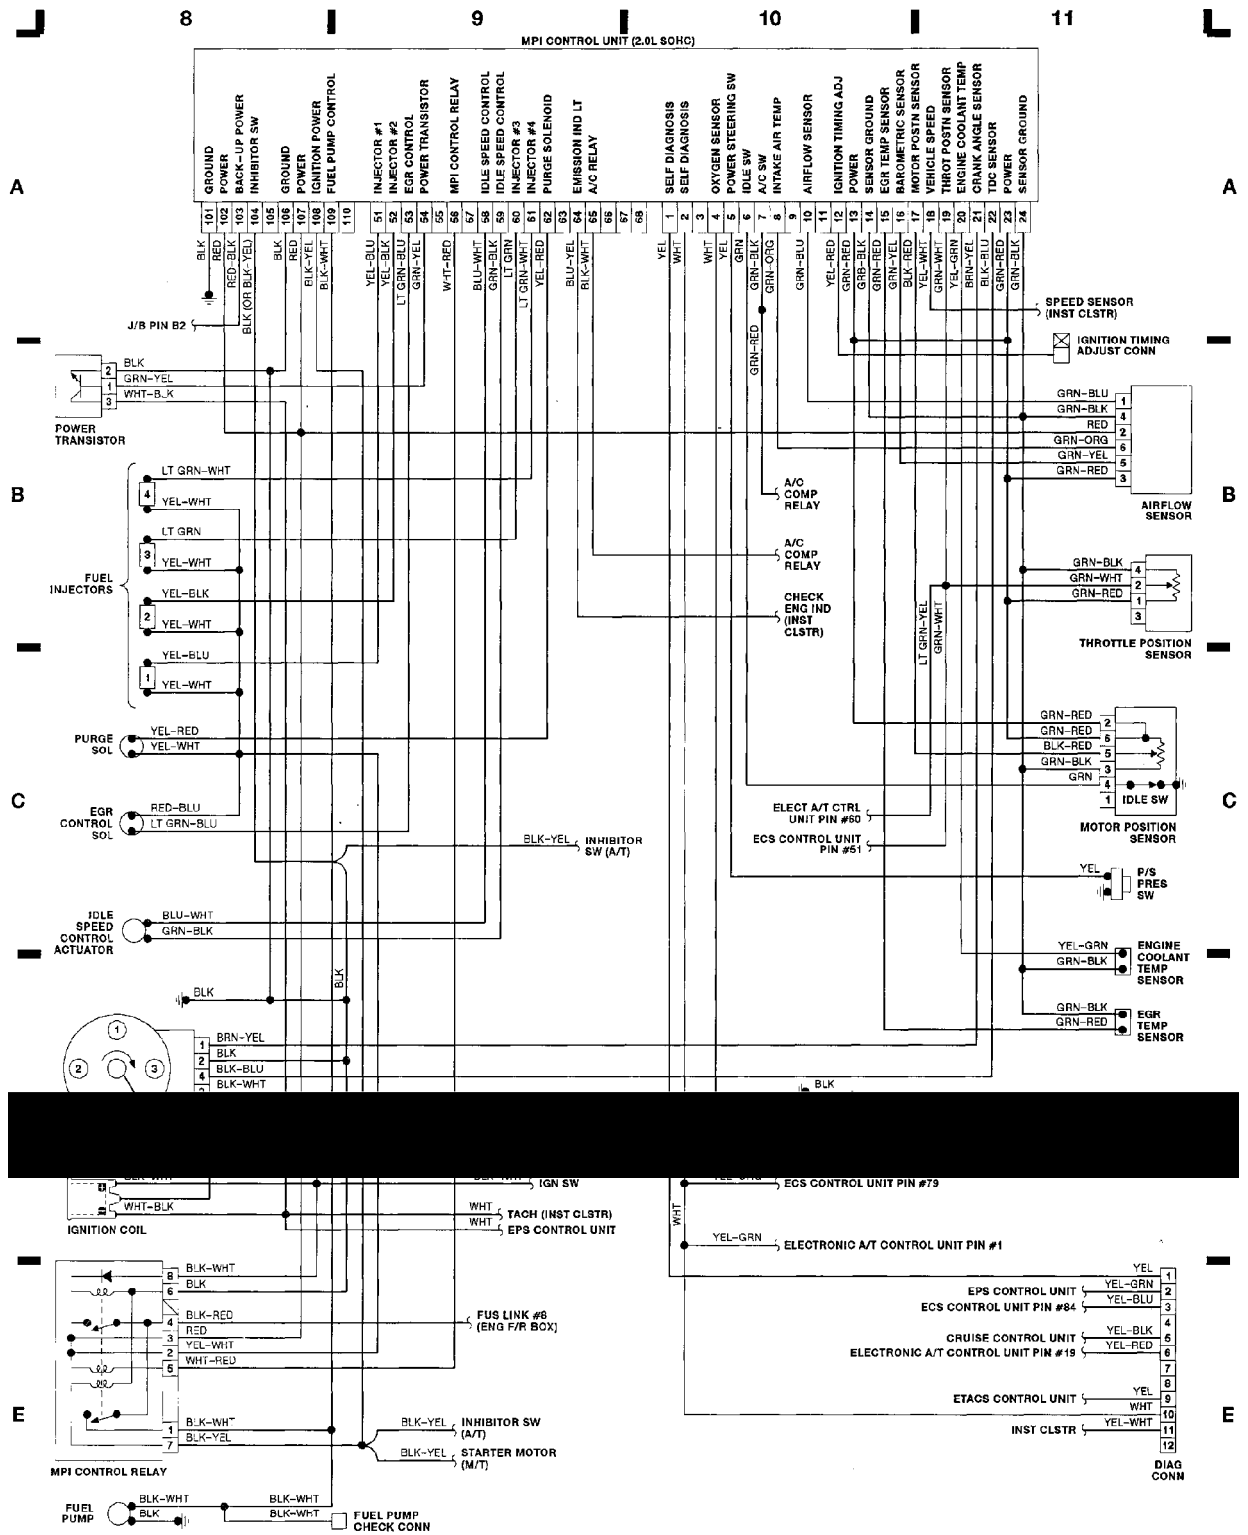


Fig. 3: Computer Engine Control (2.0L SOHC) (Grid 8-11)

WIRING DIAGRAMS

Article Text (p. 6)

1990 Mitsubishi Galant

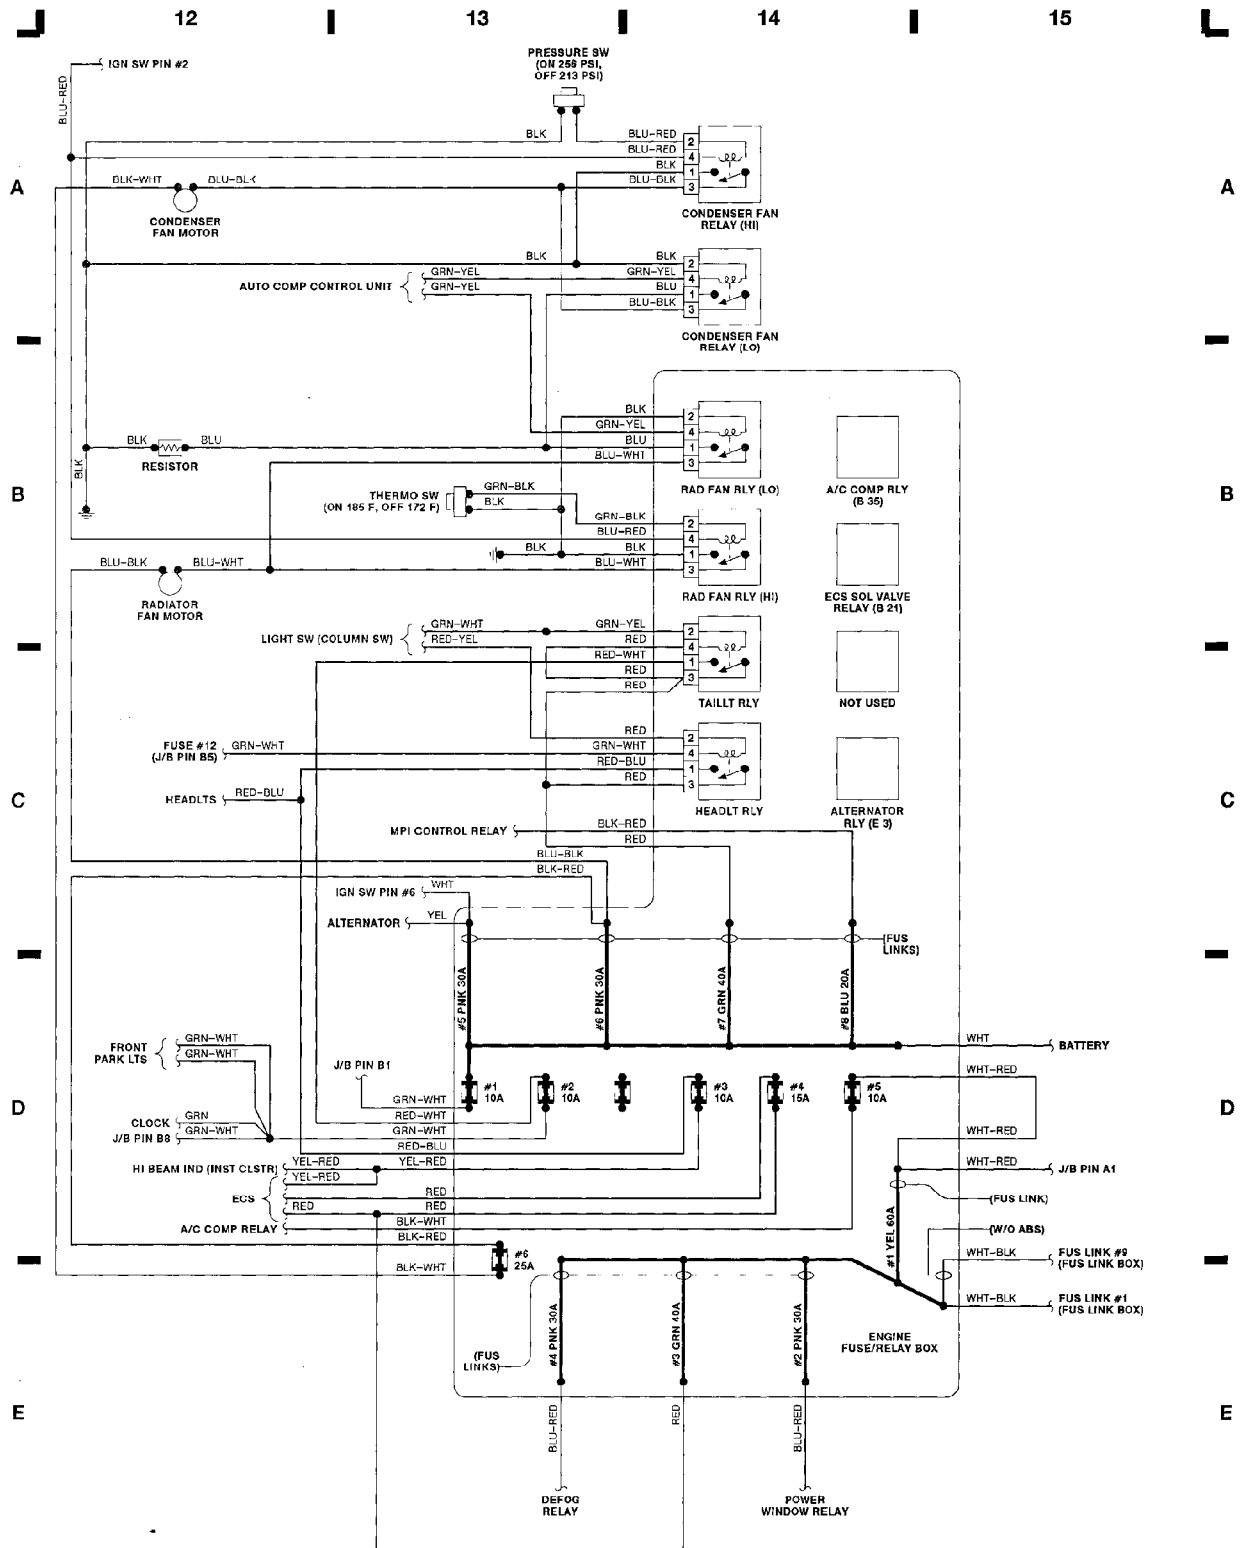


Fig. 4: Fuse Block and Relays (Grid 12-15)

1990 Mitsubishi Galant



Fig. 5: Fuse Block (Continued) (Grid 16-19)

WIRING DIAGRAMS

Article Text (p. 8)

1990 Mitsubishi Galant

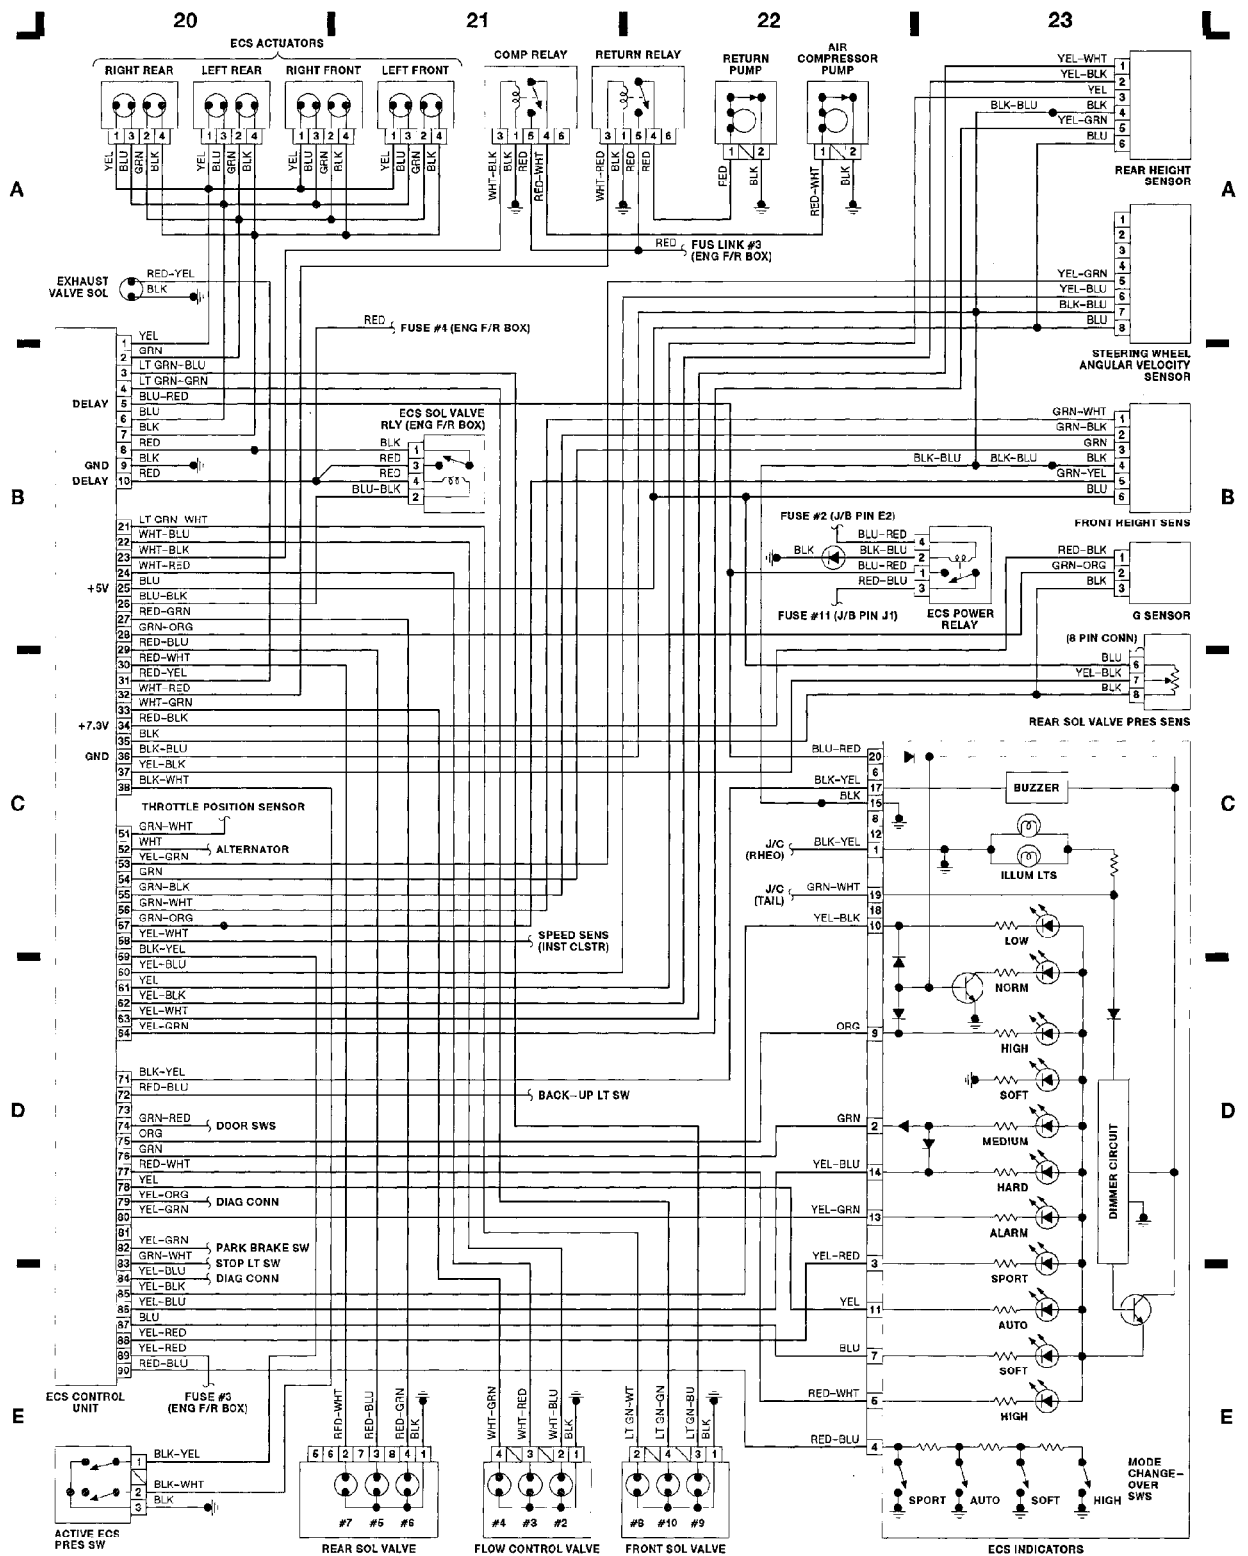


Fig. 6: Electronic Control Suspension System (ECS) (Grid 20-23)

WIRING DIAGRAMS

Article Text (p. 9)

1990 Mitsubishi Galant

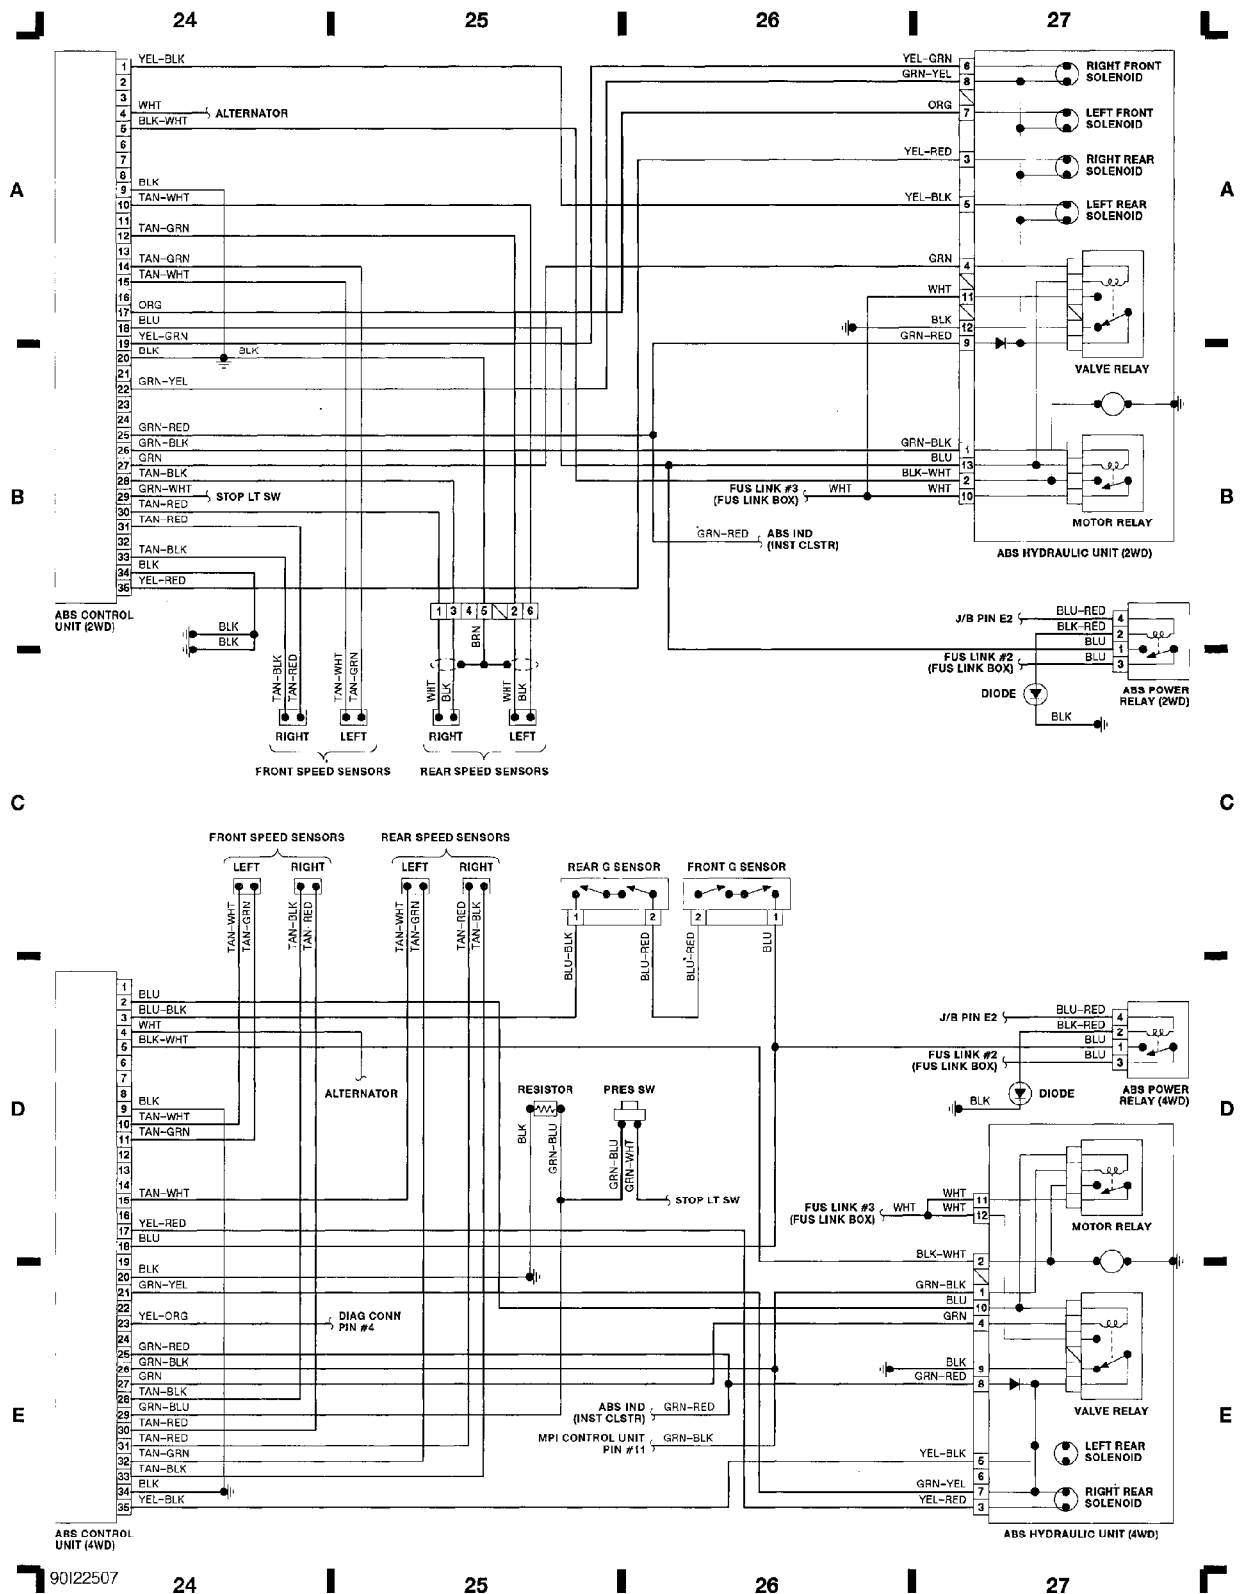


Fig. 7: Anti-Lock Brake System (ABS) (Grid 24-27)

1990 Mitsubishi Galant

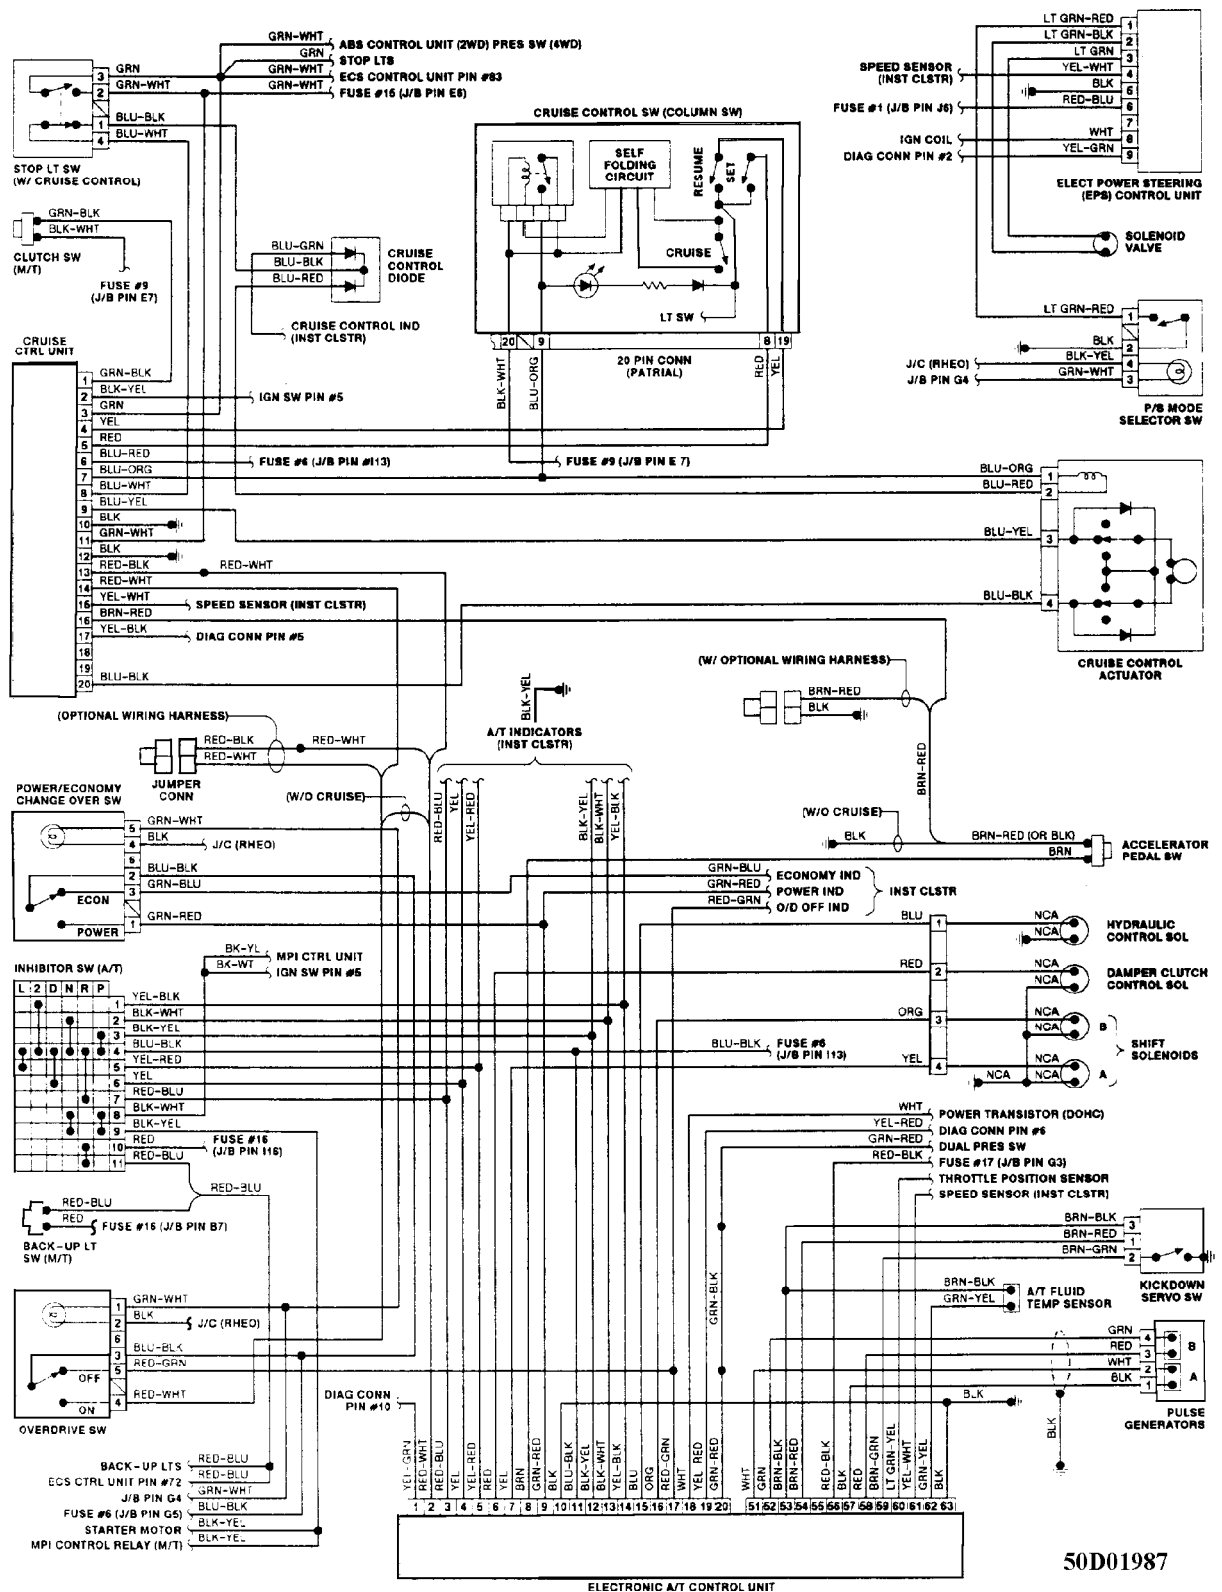


Fig. 8: Auto Seat Belt, Sunroof, Interior Lights (Grid 28-31)

WIRING DIAGRAMS

Article Text (p. 11)

1990 Mitsubishi Galant



50D01987

Fig. 9: Cruise Control, A/T Control, Electric P/S (Grid 32-35)

WIRING DIAGRAMS

Article Text (p. 12)

1990 Mitsubishi Galant

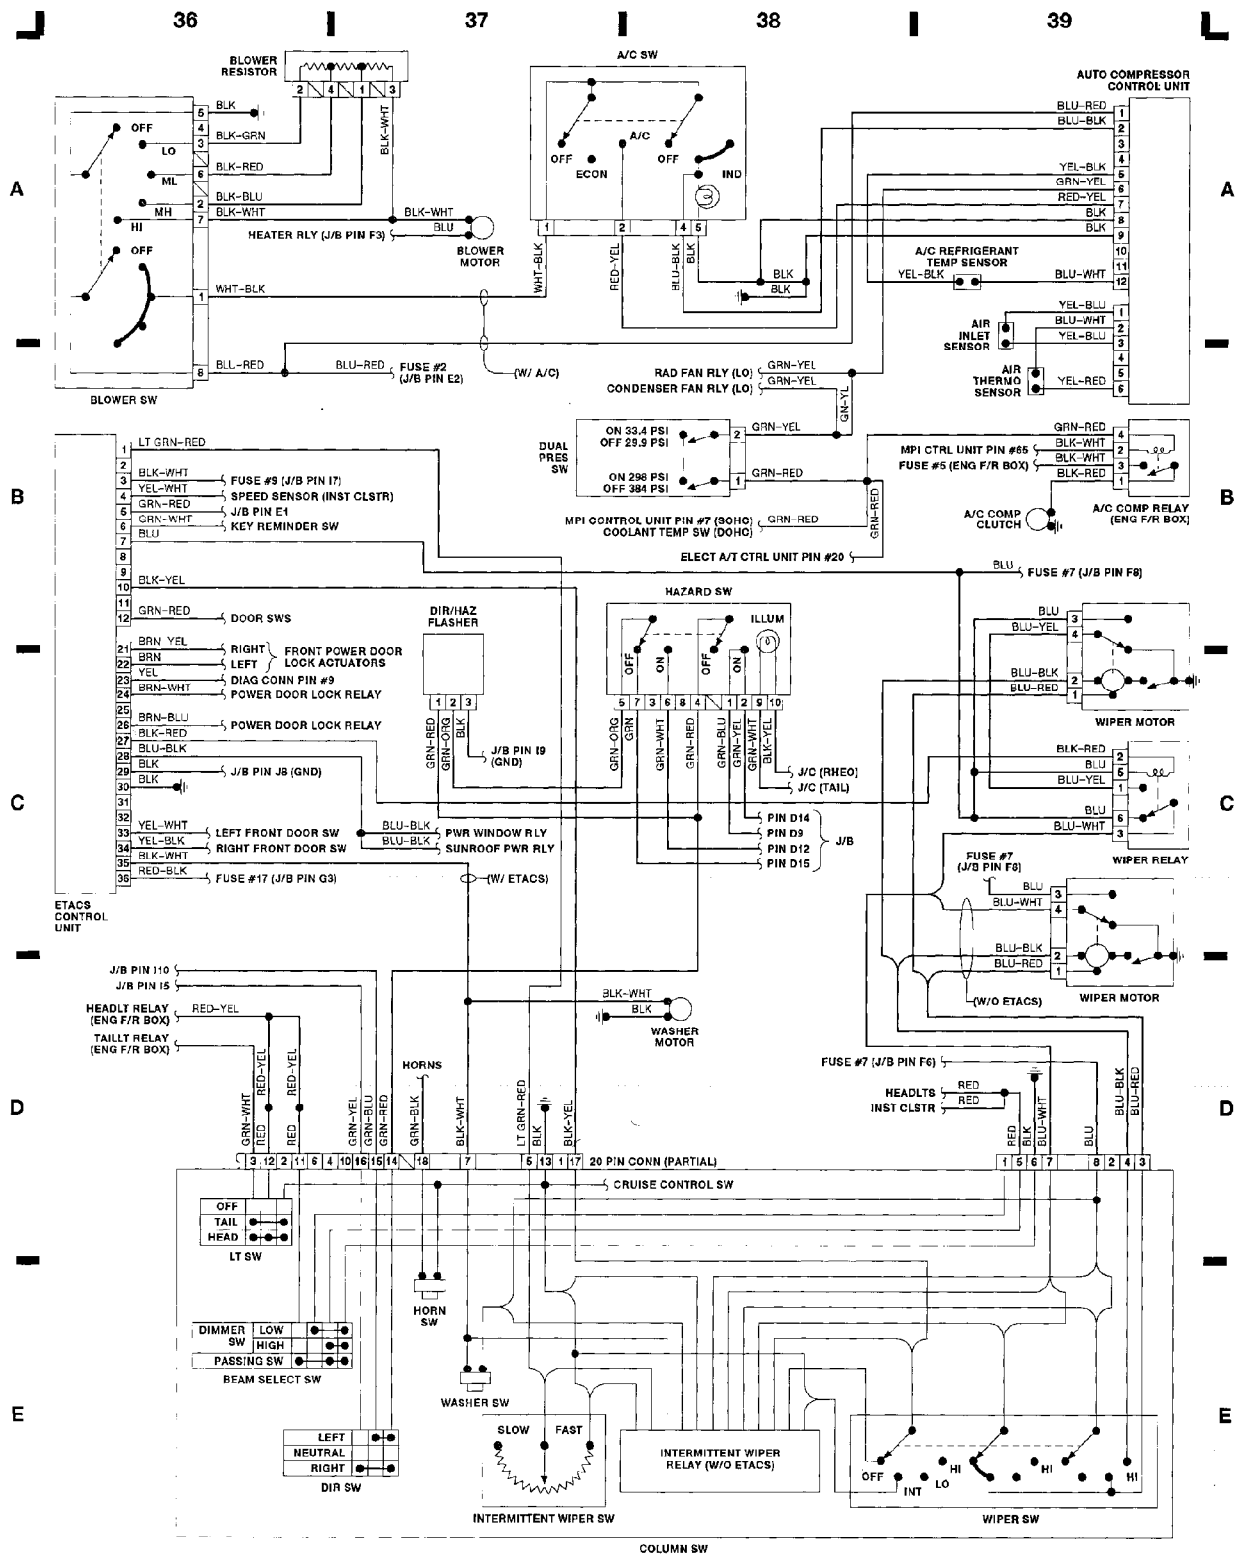


Fig. 10: ETACS Ctrl, Column Sw, Wiper/Washer, A/C Ctrl (Grid 36-39)

WIRING DIAGRAMS

Article Text (p. 13)

1990 Mitsubishi Galant

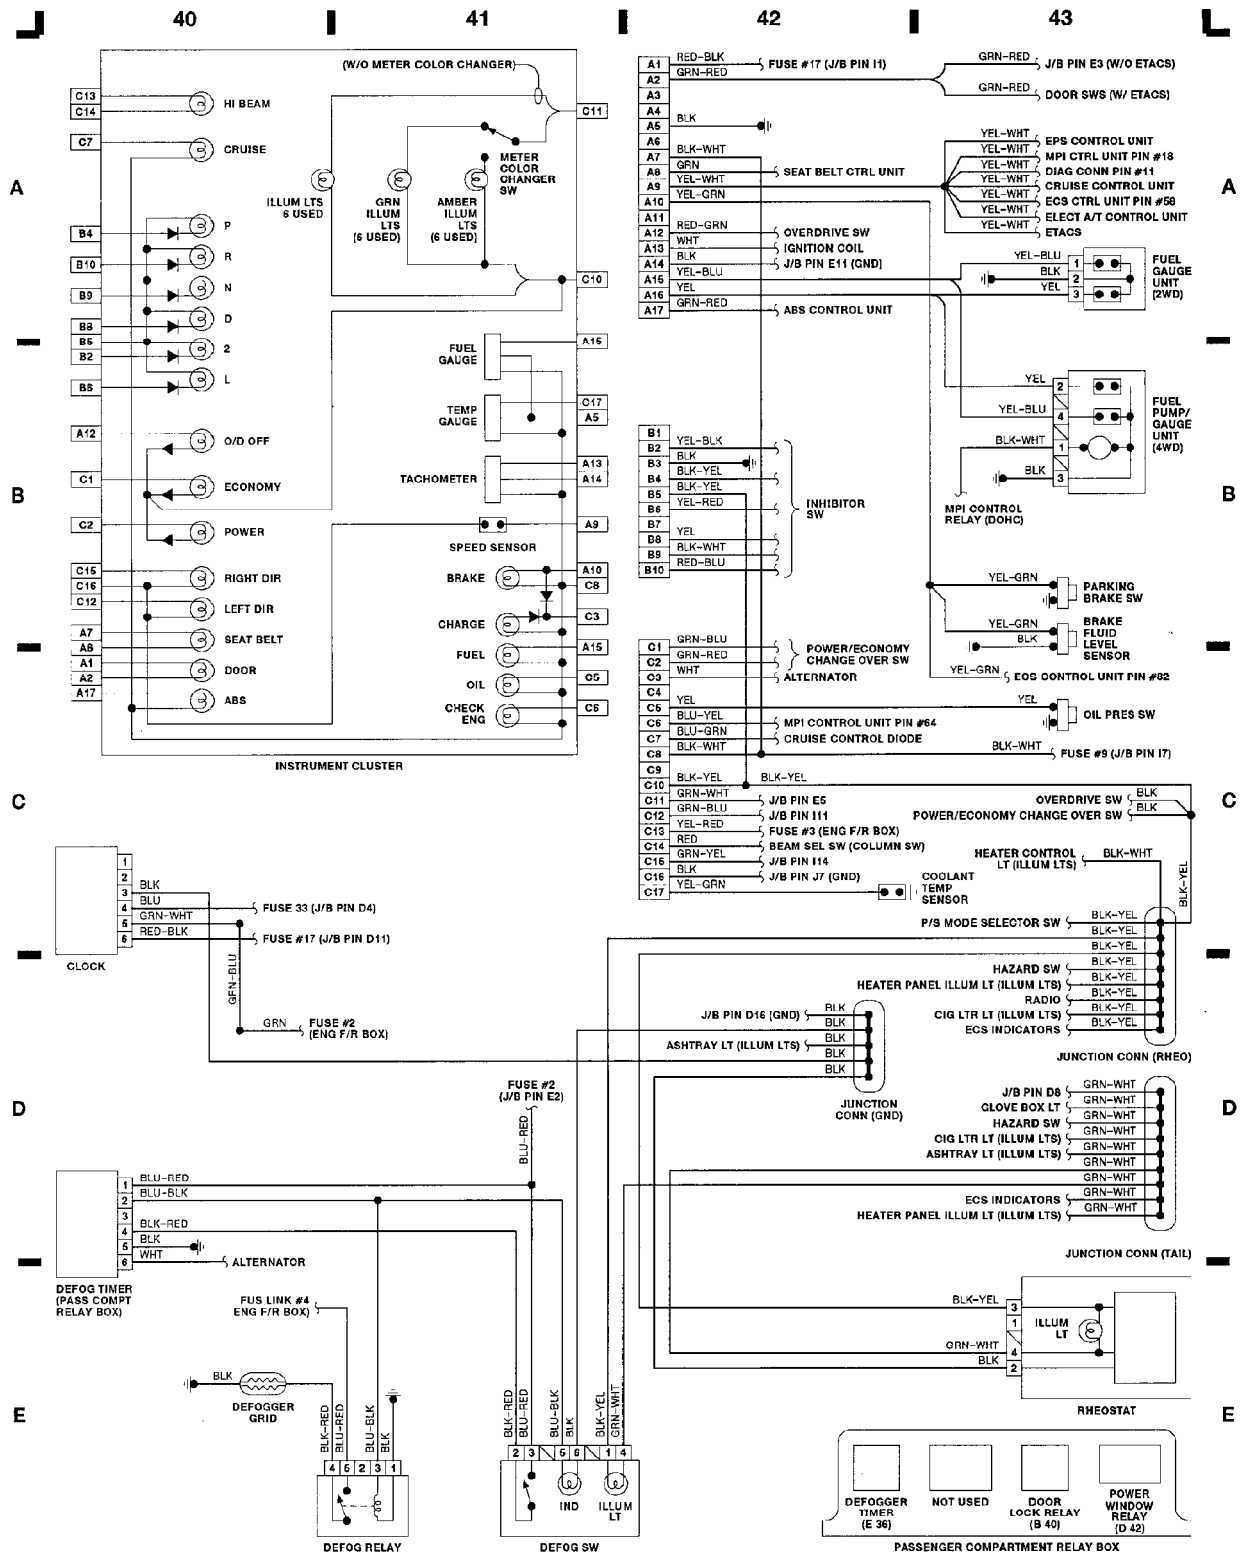


Fig. 11: Defog Sys, Junction Conns, Instrument Cluster (Grid 40-43)

WIRING DIAGRAMS

Article Text (p. 14)

1990 Mitsubishi Galant

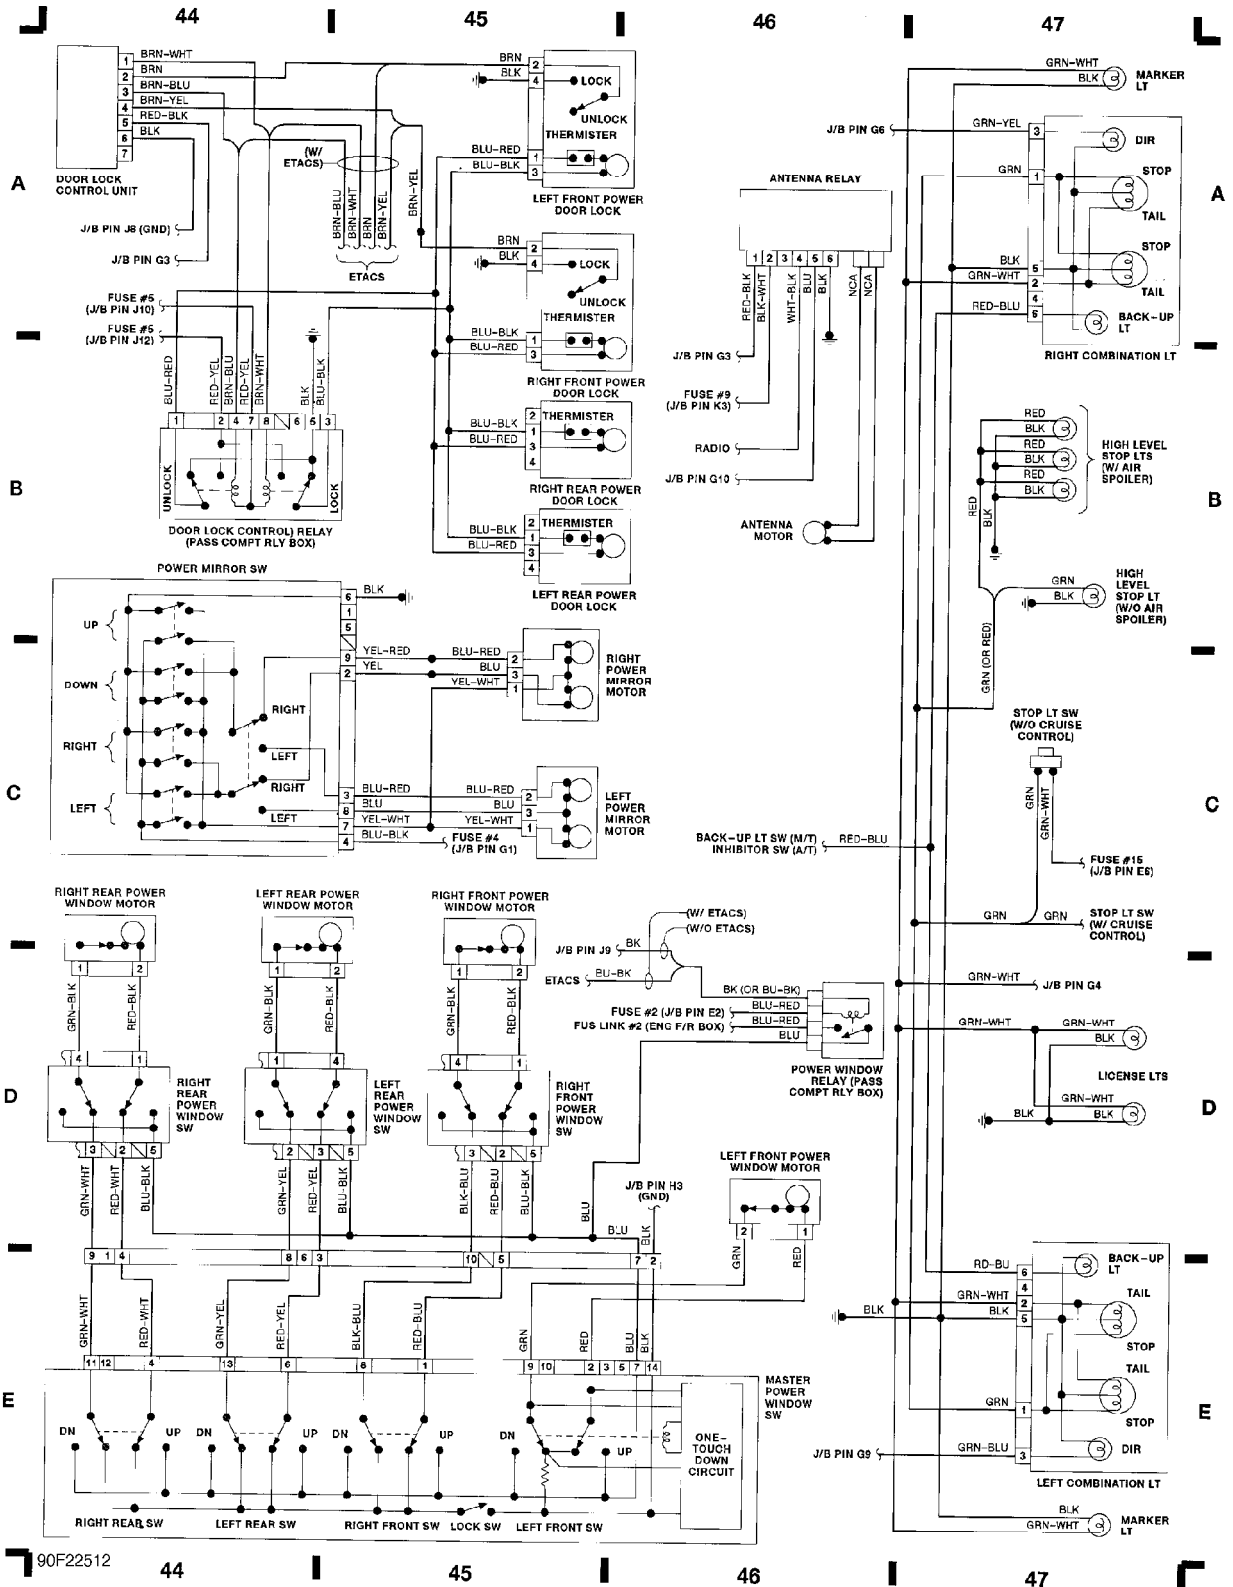


Fig. 12: Power Window/Mirrors/Door Locks & Taillights (Grid 44-47)

END OF ARTICLE