


SERVICE ADJUSTMENT PROCEDURES

CURB IDLE SPEED INSPECTION

M13FHAB

(1) The vehicle should be prepared as follows before the inspection.

- Engine coolant temperature: 85–95°C (185–205°F)
- Lights, electric cooling fan and accessories: OFF
- Transaxle: Neutral (P for vehicles with an automatic transaxle)

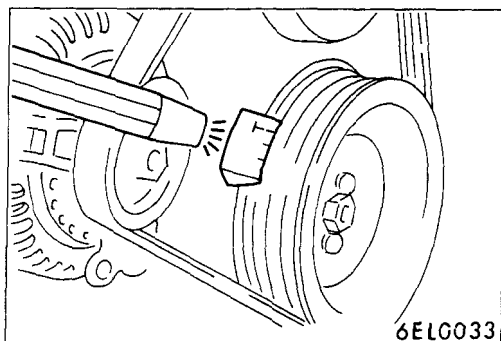

(2) Connect a tachometer.

NOTE

1. Refer to P.13-246 for information concerning connection of a tachometer.
2. For tachometer, one-half of the actual engine rpm is indicated, so the actual engine rpm is two times the indicated value shown by the tachometer. <From 1990 models>

(3) Set a timing light in position.

(4) Ground the terminal for adjustment of ignition timing.

(5) Start the engine and let it idle.

(6) Check whether or not the ignition timing is the standard value; if not, adjust.

Standard value: 5°BTDC ± 2°

(7) Stop grounding the terminal for adjustment of ignition timing.

(8) Let the engine idle for two minutes.



(9) Check the idling rpm.

**Curb idle speed: 750 ± 100 rpm <Non-Turbo>
800 ± 100 rpm <Turbo>**

NOTE

The idling rpm is automatically regulated by the idle air system.

(10) If not within the standard value range, refer to the **CHECK CHART CLASSIFIED BY PROBLEM SYMPTOMS** and check the MFI component.

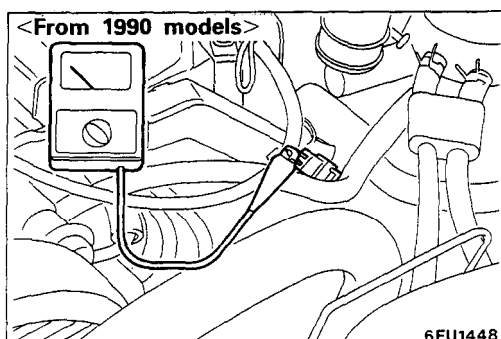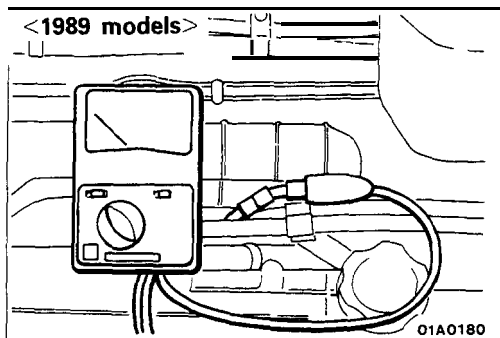

BASIC IDLE SPEED ADJUSTMENT

M13FHB7

NOTE

1. The standard idling speed has been adjusted, by the engine speed adjusting screw (RPM adjusting screw), by the manufacturer, and there should usually be no need for readjustment.
2. Use the following procedure to adjust when the idling speed drops due to an incorrect adjustment, high idling speed, or when a load such as the air conditioning is applied on the engine.
3. The adjustment, if made, should be made after first confirming that the spark plugs, the injectors, the idle air control motor, the compression pressure, etc. are all normal.




- (1) The vehicle should be prepared as follows before the inspection and adjustment.
 - Engine coolant temperature: 85–95°C (185–205°F)
 - Lights, electric cooling fan and accessories: OFF
 - Transaxle: Neutral
(P for vehicles with an automatic transaxle)
- (2) Connect the scan tool to the data link connector (white).

NOTE


When the scan tool is connected, the diagnostic test mode control terminal is grounded.

- (3) If the scan tool is not used, follow the steps below.


- ① Insert a paper clip (from the harness side) into the I-pin connector shown in the figure at the left.
Take care not to disconnect the connector.

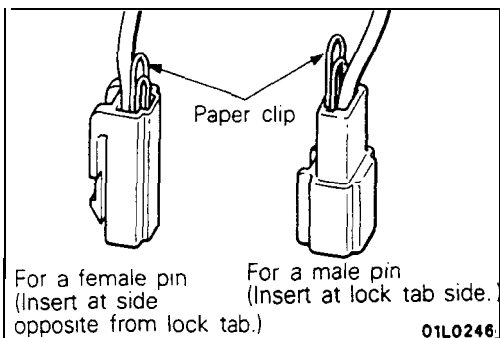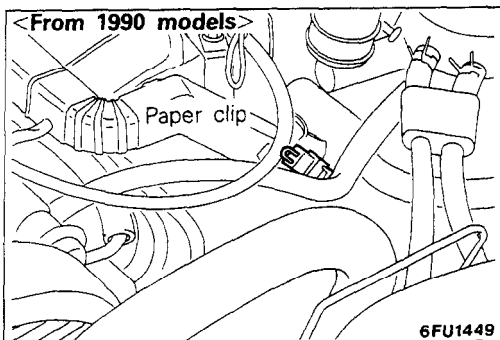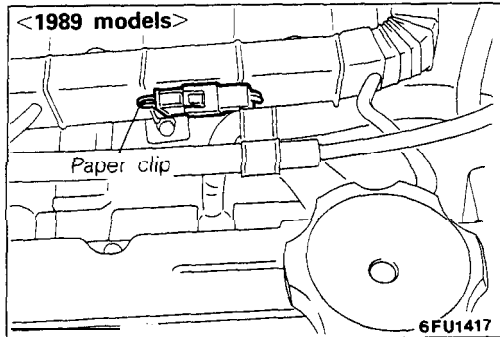**Caution**

The paper clip should be inserted between the terminals as shown in the figure at the left.

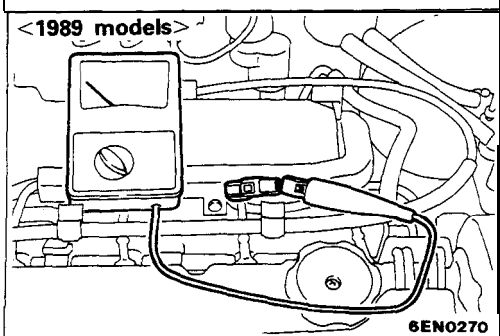


- ② Connect a primary-voltage-detection type of tachometer to the paper clip.

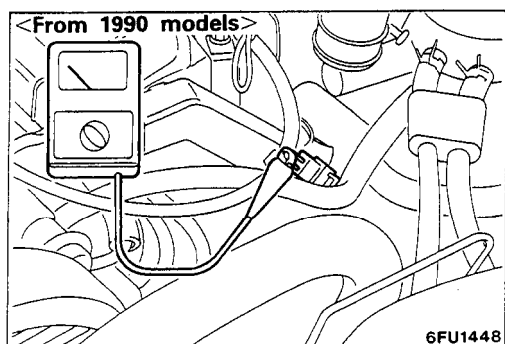


NOTE

For rpm, one-half of the actual engine rpm is indicated, so the actual engine rpm is two times the indicated value shown by the tachometer. <From 1990 models>

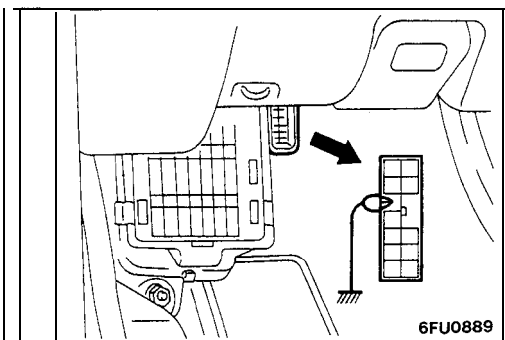

- ③ Use a jumper wire to ground the diagnostic test mode control terminal of the data link connector.

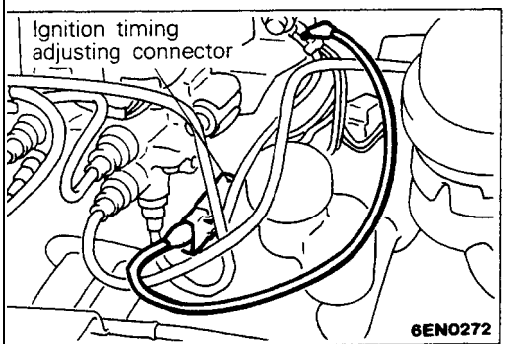


- (4) Use a jumper wire to ground the terminal for adjustment of ignition timing.
 (5) Start the engine and let it idle.
 (6) Check the standard idling rpm.
 If the scan tool is used, select item No.22 and read out the idling rpm.

**Basic idle speed: 750 ± 50 rpm <Non-Turbo>
 800 ± 50 rpm <Turbo>**

NOTE

1. The engine speed may be 20 to 100 rpm lower than indicated above for a new vehicle [driven approximately 500 km (300 miles) or less], but no adjustment is necessary.
2. If the engine stalls or the rpm is low even though the vehicle has been driven approximately 500 km (300 miles) or more, it is probable that deposits are adhered to the throttle valve, so clean it. (Refer to P.13-248.)

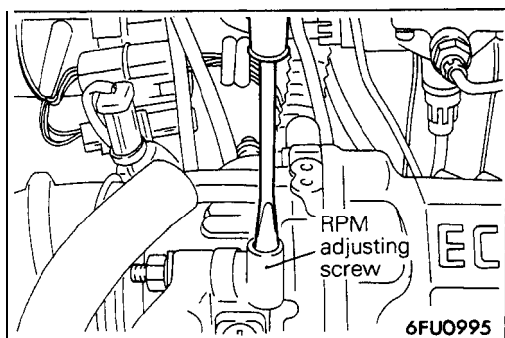


- (7) If not within the standard value range, turn the engine speed adjusting screw (RPM adjusting screw) to make the necessary adjustment.

NOTE

If the idling speed is higher than the standard value range even when the RPM adjusting screw is fully closed, check whether or not there is any indication that the CTP switch (fixed SAS) has been moved.

If there is an indication that it has been moved, adjust the CTP switch (fixed SAS). If there are no indications that it has been moved, it is possible that there is leakage as a result of deterioration of the fast idle air valve (FIAV), and, if so, the throttle body should be replaced.

- (8) Switch OFF the ignition switch.
- (9) If the scan tool was not used, disconnect the jumper wire from the diagnostic test mode control terminal.
- (10) Disconnect the jumper wire from the terminal for adjustment of ignition timing, and return the connector to its original condition.
- (11) Start the engine again and let it run at idle speed for about ten minutes; check to be sure that the idling condition is normal.

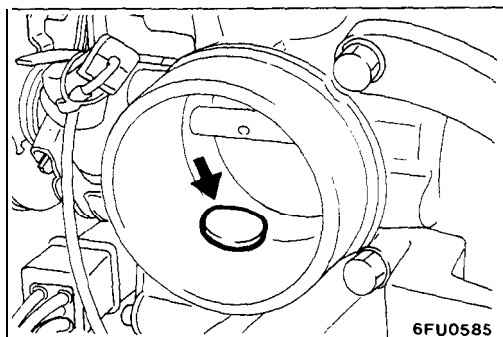

THROTTLE BODY (THROTTLE VALVE AREA) CLEANING

M13FICL

- (1) Start the engine and warm it up until the temperature of the engine coolant reaches 80°C (176°F) or higher; then stop the engine.
- (2) Disconnect the air intake hose at the throttle body side.
- (3) Plug the bypass passage entrance of the throttle body.

Caution

Be absolutely sure that no cleaning liquid enters the bypass passage.

- (4) Spray cleaning liquid (from the intake port of the throttle body) onto the valve, and then leave as is for about five minutes.
- (5) Start the engine and race it a few times; then let it run at idle speed for about one minute.

NOTE


If, because the bypass passage is plugged, the engine idling speed is unstable (or the engine stalls), let the engine run with the throttle valve slightly open.

- (6) If deposits are not removed from the throttle valve, repeat steps (4) and (5).
- (7) Remove the plug from the bypass passage entrance.
- (8) Connect the air intake hose.
- (9) Using the scan tool, erase the diagnostic trouble code, or disconnect the battery's ground cable for ten seconds or longer and then reconnect it.
- (10) Adjust the basic idle speed (engine speed adjusting screw). (Refer to P.13-245.)

THROTTLE POSITION SENSOR ADJUSTMENT

M13FIEE


- (1) Connect the scan tool to the data link connector (white).

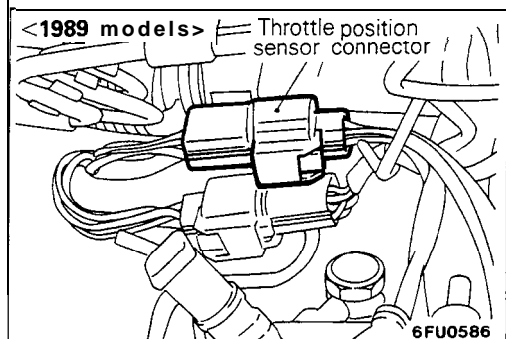


(2) If a scan tool is not used, perform the following operation.

<1989 models>

- ① Disconnect the throttle-position sensor connector, and connect the special tool (test harness) between the disconnected connectors.

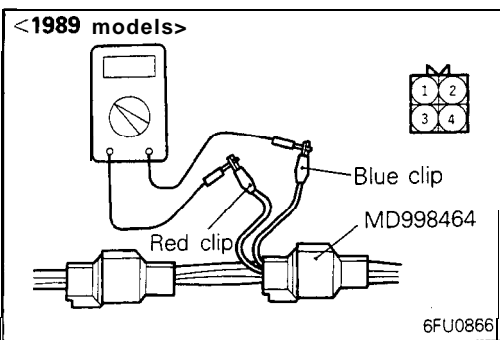


- ② Connect a digital-type voltmeter between the ② terminal (red clip, sensor ground) and the ④ terminal (blue clip, sensor output) of the throttle-position sensor connector.

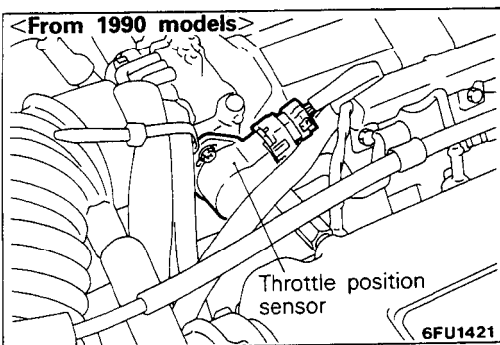

<From 1990 models>

- ① Disconnect the throttle position sensor connector and use the special tool (test harness set) between the disconnected connector.


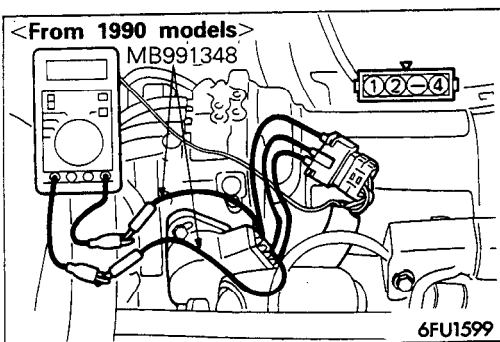


- ② Connect a digital type voltmeter between terminal ② (sensor output) of the throttle position sensor and terminal ④ (sensor ground).

- (3) Switch ON the ignition switch.
(Do not start the engine.)

- (4) Check the throttle-position sensor's output voltage.
When a scan tool is used, select Item No.14 to read the throttle position sensor output voltage.

Standard value: 0.48–0.52 V.

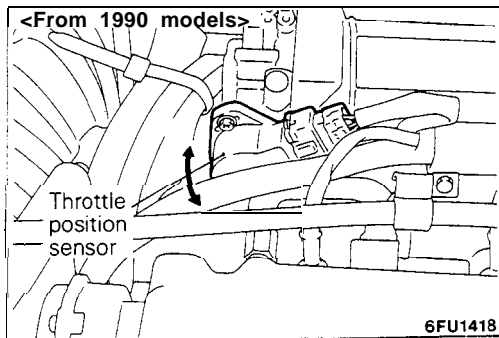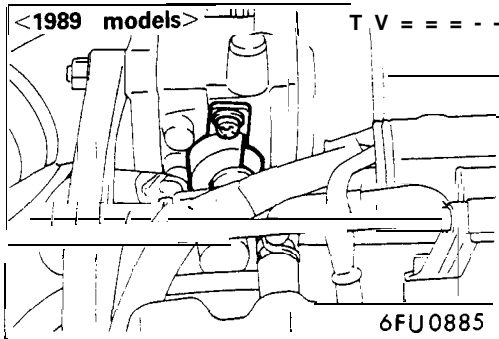

- (5) If there is a deviation from the standard value, loosen the throttle-position sensor installation bolt and then turn the throttle-position sensor itself to make the adjustment after the throttle body was removed. Be sure to securely retighten the bolt after making the adjustment.

NOTE

The output voltage becomes higher when the throttle-position sensor is turned clockwise.

For removal and installation of throttle body, refer to "Engine Service Manual".



- (6) Switch OFF the ignition switch.
- (7) If the diagnostic trouble code is output while adjusting the throttle position sensor, use a scan tool to erase the diagnostic trouble code, or disconnect the battery cable from the negative terminal of the battery for more than 10 seconds and then reconnect the cable. (This will cancel the memory of the failure code due to throttle position sensor adjustment.)

CLOSED THROTTLE POSITION SWITCH (FIXED SAS) ADJUSTMENT

M13FIDA

NOTE


1. The closed throttle position switch has been precisely adjusted by the manufacturer; it should not, therefore, be moved to another setting.
2. If however, the adjustment is for any reason accidentally disturbed, or the closed throttle position switch is replaced, make the necessary readjustment by following the steps below.
 - (1) Sufficiently relax the tension of the accelerator cable.
 - (2) Disconnect the connector of the closed throttle position switch (fixed SAS).
 - (3) Loosen the lock nut of the closed throttle position switch (fixed SAS).
 - (4) Turn the closed throttle position switch (fixed SAS) in the counter-clockwise direction until it is sufficiently loosened, and securely close the throttle valve fully.
 - (5) Connect an ohmmeter between the closed throttle position switch terminal and the body.
 - (6) Begin tightening the closed throttle position switch and locate the point at which the closed throttle position switch is switched ON (conductive with body). (This is the point at which the throttle valve begins to open.) From that point, then tighten the closed throttle position switch 15/16 turn.
 - (7) Securely tighten the lock nut while holding the closed throttle position switch so that it won't turn.
 - (8) Adjust the tension of the accelerator cable.
 - (9) Adjust the basic idling speed (engine speed adjusting screw). (P.13-245.)
 - (10) Adjust the throttle-position sensor. (P.13-248.)

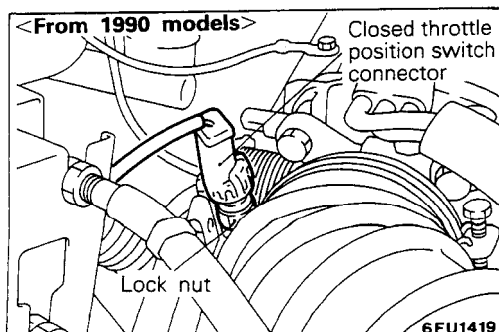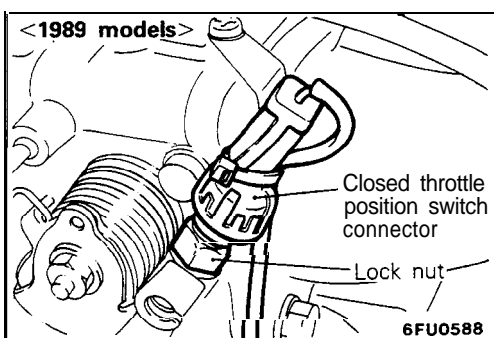

ON VEHICLE INSPECTION OF MFI COMPONENTS

M13YA-A

COMPONENT LOCATION










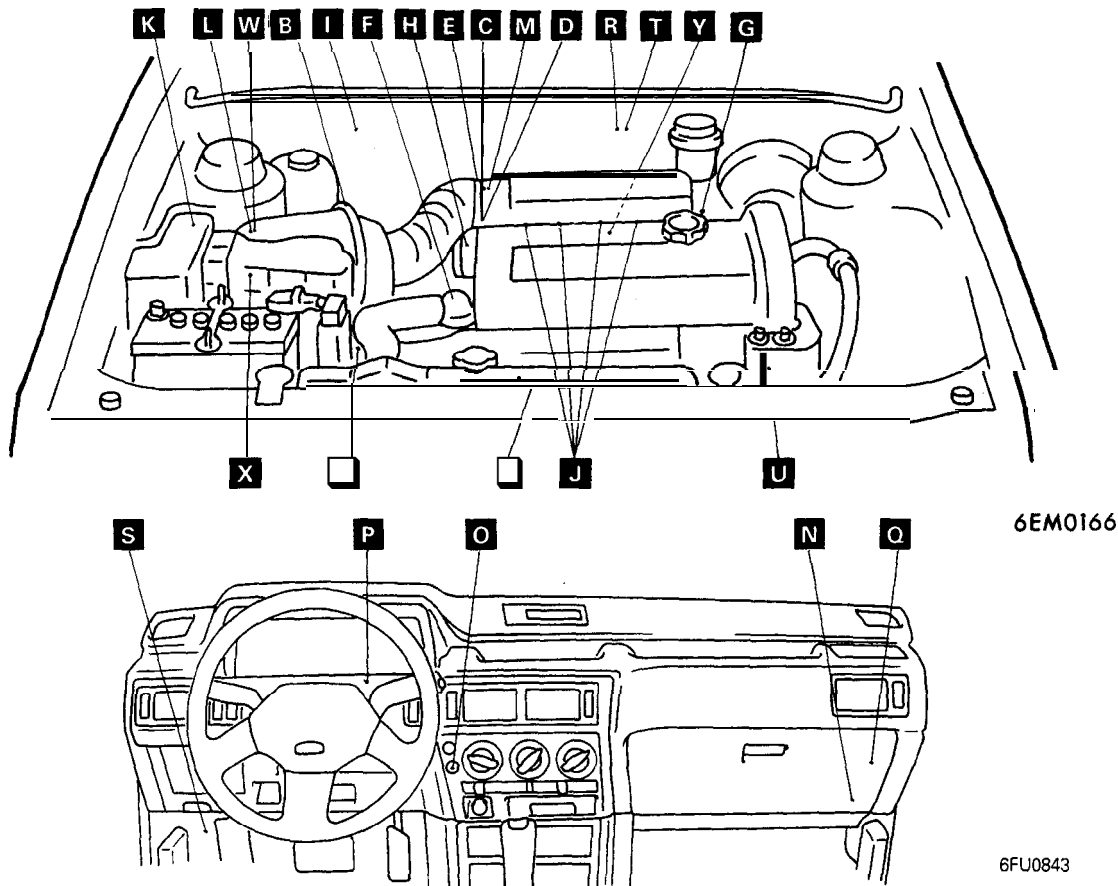












Name	Symbol	Name	Symbol
Air conditioning compressor clutch relay	K	idle air control motor (stepper motor)	C
Air conditioning switch	O	Ignition coil (ignition power transistor)	G
Closed throttle position switch (fixed SAS)	E	Ignition timing adjustment terminal	R
Crankshaft position sensor and camshaft position sensor	H	Injector	J
Data link connector	S	Knock sensor	Y
Engine control module	Q	Multipoint fuel injection relay	N
Engine coolant temperature sensor	F	Park/neutral position switch <A/T>	V
EGR solenoid	L	Power steering pressure switch	U
EGR temperature sensor	M	Throttle position sensor	D
Evaporative emission purge solenoid	I	Turbocharger waste gate solenoid	X
Fuel pressure solenoid	W	Vehicle speed sensor (reed switch)	P
Fuel pump check terminal	T	Volume air flow sensor (incorporating intake air temperature sensor and barometric pressure sensor)	B
Heated oxygen sensor	A		











NOTE

The "Name" column is arranged in alphabetical order.

TSB Revision

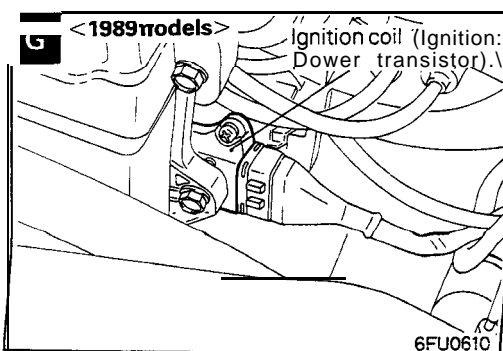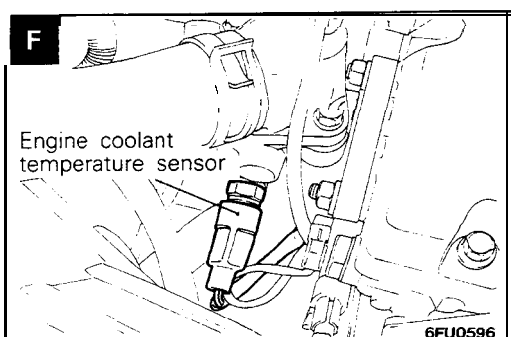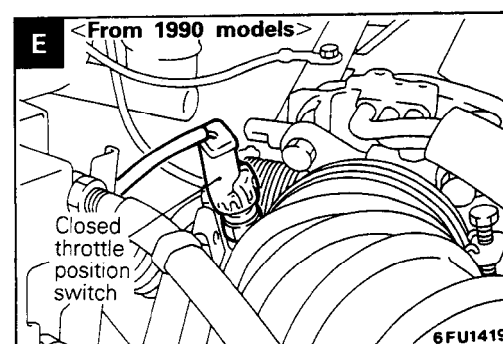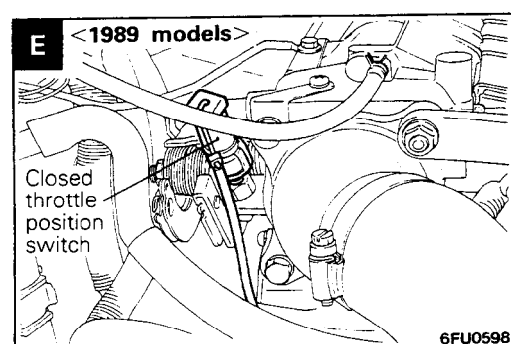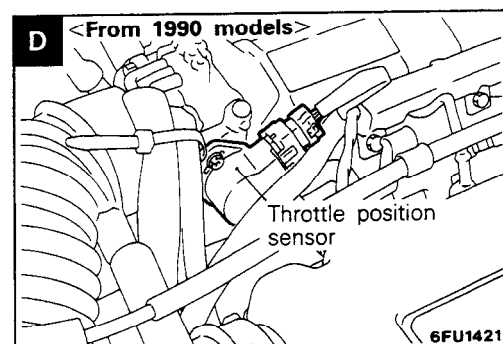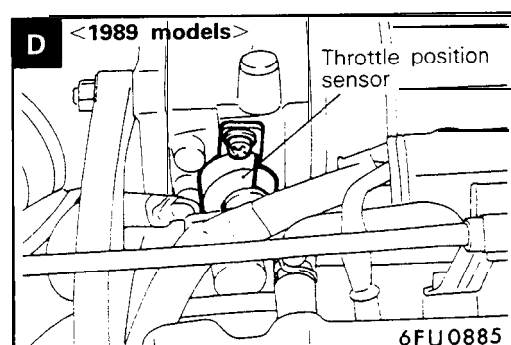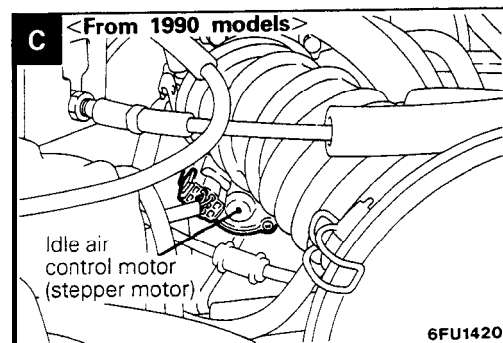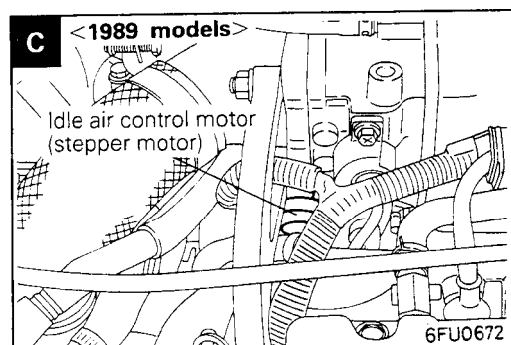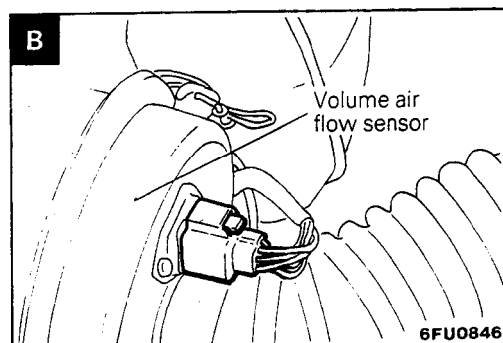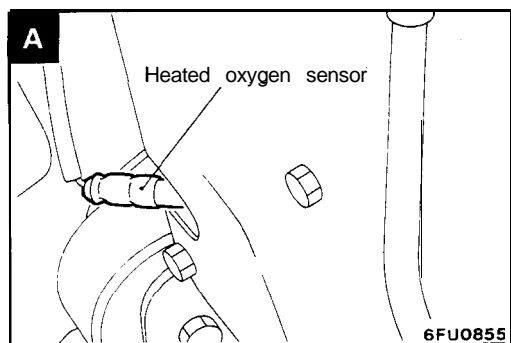

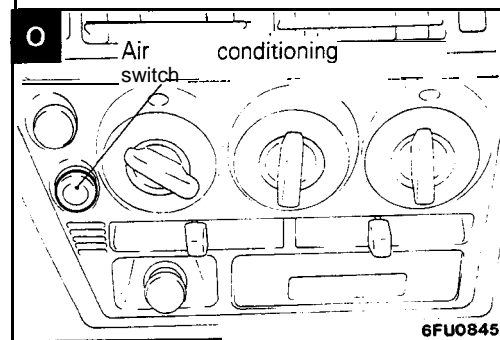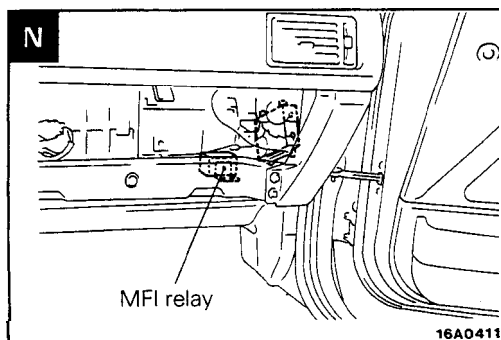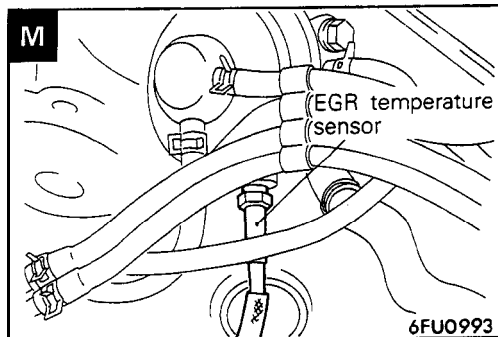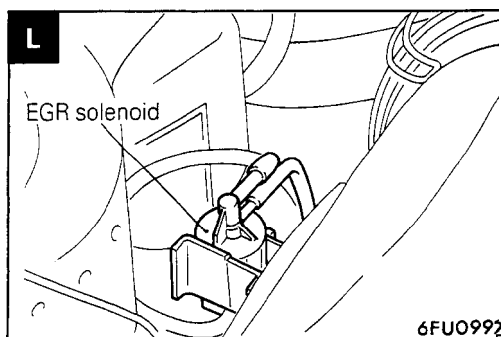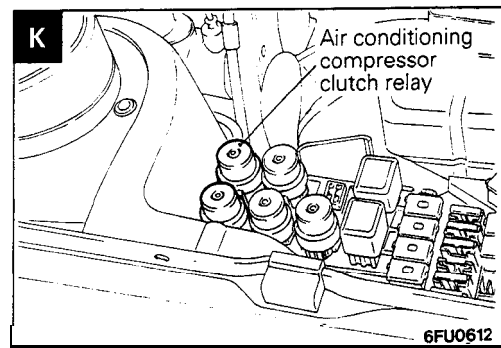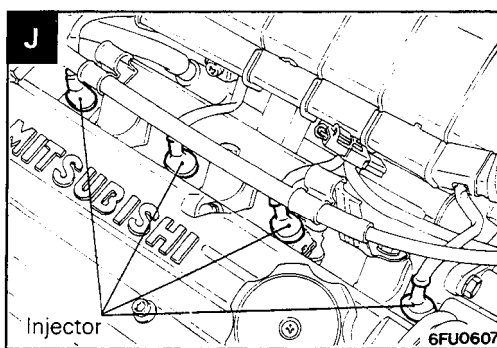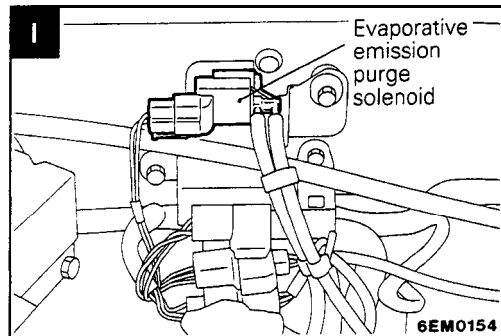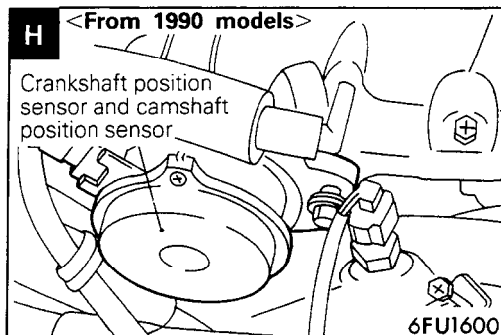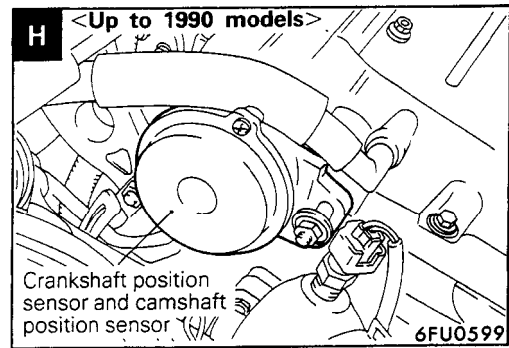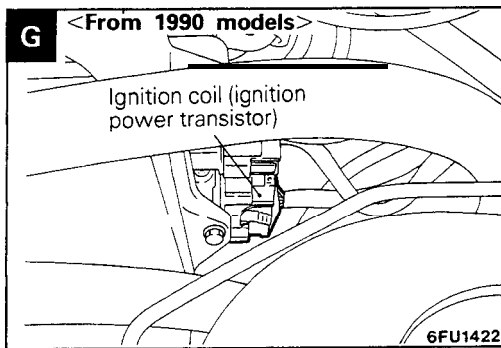

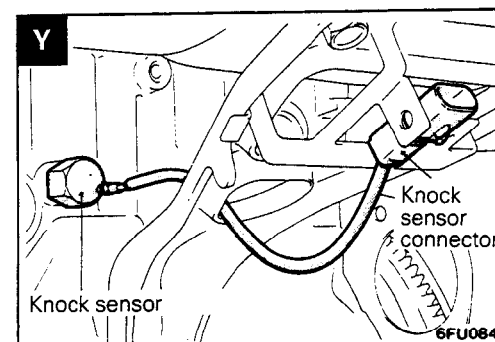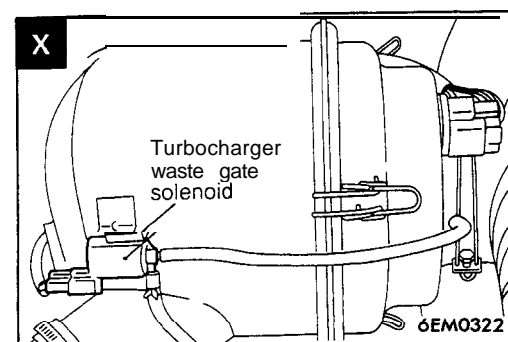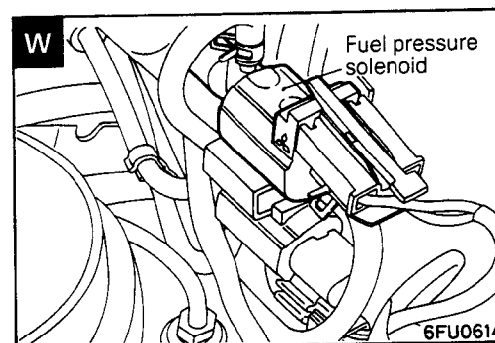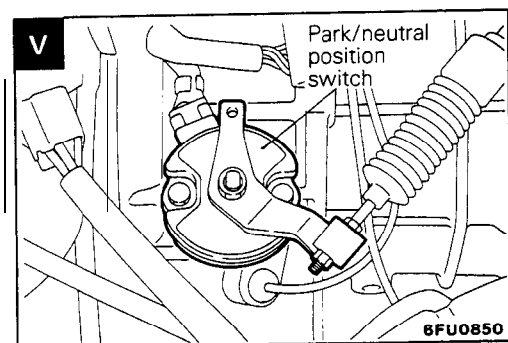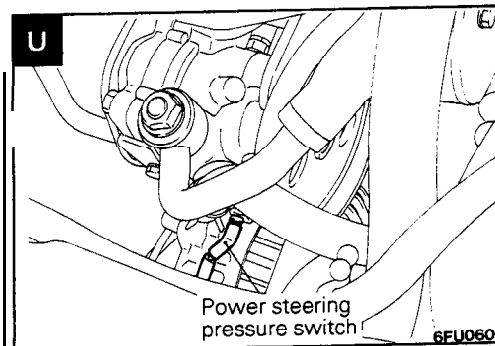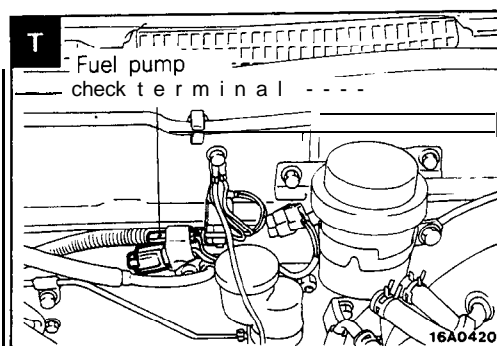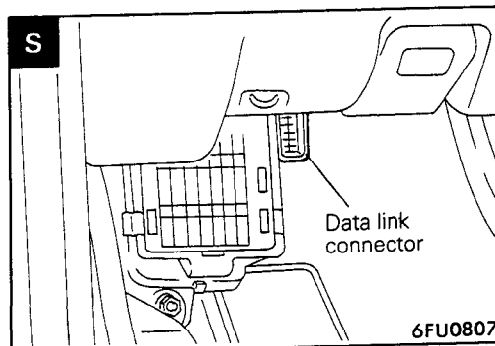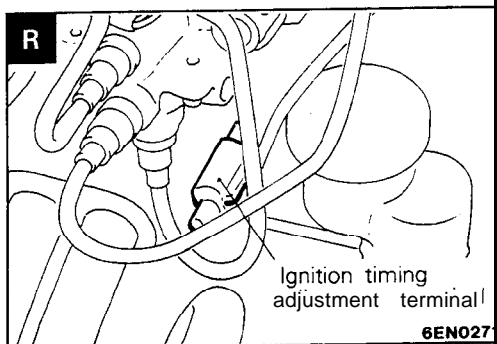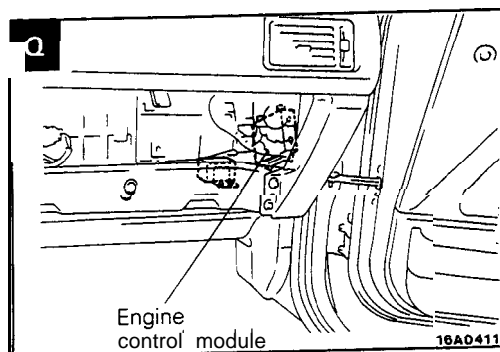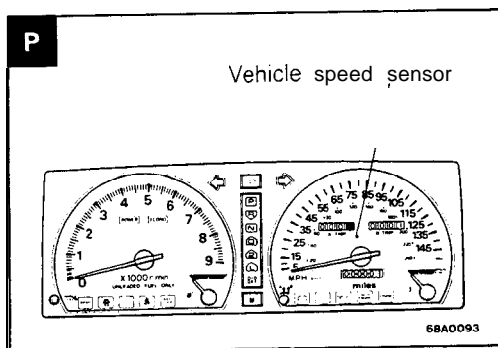


COMPONENTS INSPECTION PROCEDURE— Using Scan Tool

M13YBAGa

Refer to P.13-41.

POWER SUPPLY AND IGNITION SWITCH-IG

M13YCAB

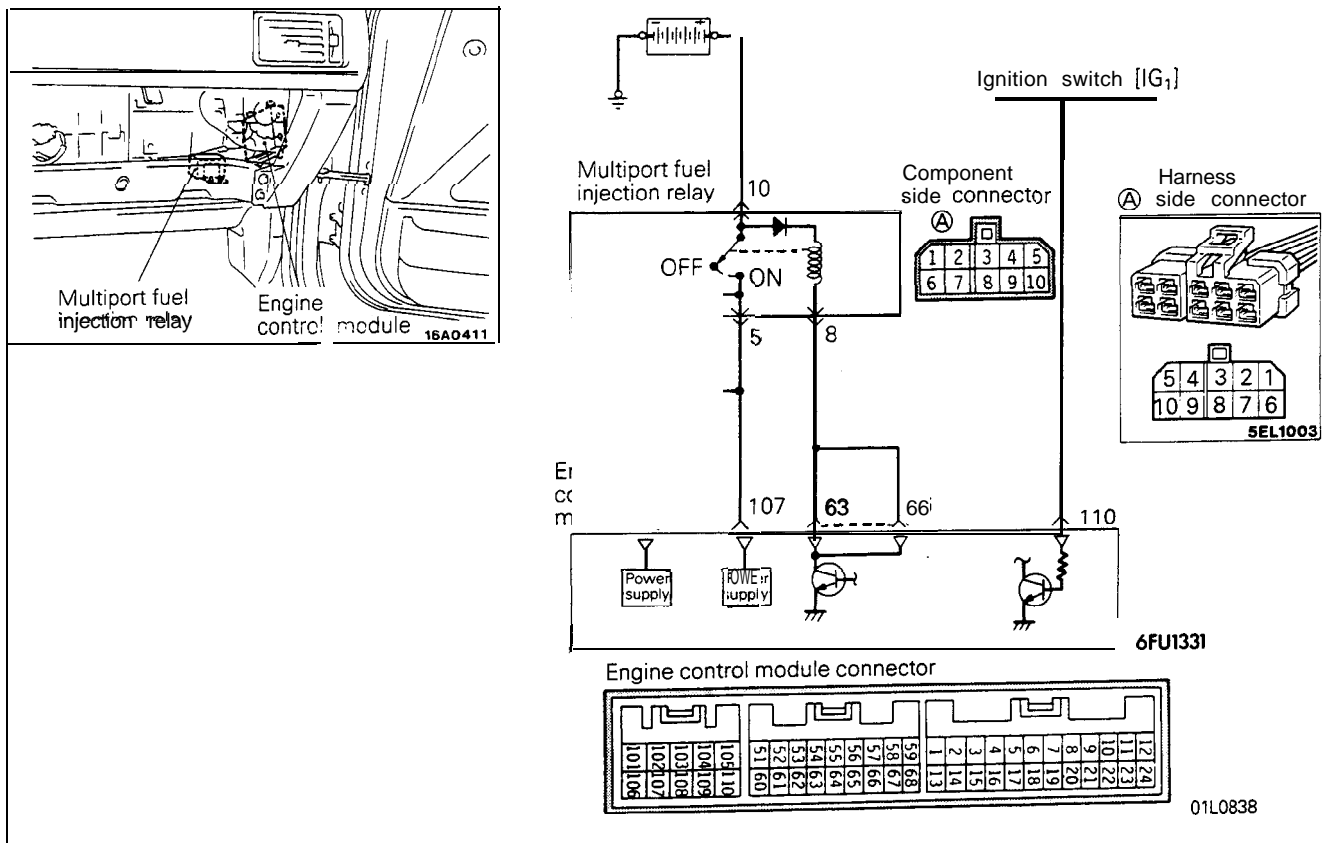

OPERATION

- While the ignition switch is ON, battery power supply is supplied to the engine control module, injectors, volume air flow sensor, etc.
- When the ignition switch is switched ON, current flows from the ignition switch, via the multiport fuel injection relay coil to ground.

As a result, the multiport fuel injection relay switch is switched ON, and power is supplied, by way of the multiport fuel injection relay switch, from the battery to the engine control module.


INSPECTION

Using Scan tool

Function	Item No.	Data display	Check conditions	Standard value
Data reading	16	Engine control module power-supply voltage	Ignition switch: ON	Battery positive voltage

HARNESS INSPECTION

<div data-bbox="186 238 234 296" data-label="Text">1</div> <div data-bbox="295 288 566 551" data-label="Diagram"></div> <div data-bbox="487 232 652 302" data-label="Text">Engine control module harness side connector</div> <div data-bbox="579 536 659 559" data-label="Text">01L0427</div>	<div data-bbox="692 238 1116 381" data-label="Text"><p>Measure the ignition switch terminal input voltage.</p><ul style="list-style-type: none">Engine control module connector: DisconnectedIgnition switch: ON</div> <div data-bbox="725 395 1083 522" data-label="Table"><table><tr><th>Voltage (V)</th></tr><tr><td>Battery positive voltage</td></tr></table></div> <div data-bbox="1149 296 1250 395" data-label="Image"></div> <div data-bbox="1149 422 1250 495" data-label="Image"></div> <div data-bbox="1257 296 1455 522" data-label="Text"><p>→ STOP</p><p>Repair the harness. (Ignition switch - <u>110</u>)</p></div>	Voltage (V)	Battery positive voltage
Voltage (V)			
Battery positive voltage			
<div data-bbox="186 594 234 650" data-label="Text">2</div> <div data-bbox="194 656 368 706" data-label="Text">Ⓐ Harness side connector</div> <div data-bbox="214 706 361 878" data-label="Diagram"></div> <div data-bbox="480 621 593 905" data-label="Diagram"></div> <div data-bbox="566 890 659 913" data-label="Text">7FU0537</div>	<div data-bbox="692 594 1116 685" data-label="Text"><p>Measure the power supply voltage of the multiport fuel injection relay.</p><ul style="list-style-type: none">Connector: Disconnected</div> <div data-bbox="725 721 1083 849" data-label="Table"><table><tr><th>Voltage (V)</th></tr><tr><td>Battery positive voltage</td></tr></table></div> <div data-bbox="1149 650 1250 750" data-label="Image"></div> <div data-bbox="1149 779 1250 849" data-label="Image"></div> <div data-bbox="1257 665 1455 864" data-label="Text"><p>→ 3</p><p>Repair the harness. (Battery - <u>Ⓐ10</u>)</p></div>	Voltage (V)	Battery positive voltage
Voltage (V)			
Battery positive voltage			
<div data-bbox="186 955 234 1013" data-label="Text">3</div> <div data-bbox="194 1019 368 1069" data-label="Text">Ⓐ Harness side connector</div> <div data-bbox="208 1069 355 1247" data-label="Diagram"></div> <div data-bbox="394 990 507 1247" data-label="Diagram"></div> <div data-bbox="507 948 652 1019" data-label="Text">Engine control module harness side connector</div> <div data-bbox="553 1253 645 1274" data-label="Text">7FU0467</div>	<div data-bbox="692 955 1116 1174" data-label="Text"><p>Check for an open-circuit, or a short-circuit to ground, between the engine control module and the multiport fuel injection relay.</p><ul style="list-style-type: none">Engine control module connector: DisconnectedMultiport fuel injection relay connector: Disconnected</div> <div data-bbox="1143 1013 1242 1112" data-label="Image"></div> <div data-bbox="1143 1139 1242 1212" data-label="Image"></div> <div data-bbox="1250 1033 1455 1232" data-label="Text"><p>→ 4</p><p>Repair the harness. (<u>Ⓐ8</u> - <u>63</u>) (<u>Ⓐ8</u> - <u>66</u>)</p></div>		
<div data-bbox="186 1317 234 1373" data-label="Text">4</div> <div data-bbox="194 1508 355 1566" data-label="Text">Ⓐ Harness side connector</div> <div data-bbox="208 1373 355 1516" data-label="Diagram"></div> <div data-bbox="394 1382 507 1607" data-label="Diagram"></div> <div data-bbox="480 1311 652 1382" data-label="Text">Engine control module harness side connector</div> <div data-bbox="560 1607 652 1636" data-label="Text">6FU145C</div>	<div data-bbox="692 1317 1116 1531" data-label="Text"><p>Check for an open-circuit, or a short-circuit to ground, between the engine control module and the multiport fuel injection relay.</p><ul style="list-style-type: none">Multiport fuel injection relay connector: DisconnectedEngine control module connector: Disconnected</div> <div data-bbox="1136 1373 1235 1473" data-label="Image"></div> <div data-bbox="1136 1502 1235 1572" data-label="Image"></div> <div data-bbox="1250 1373 1455 1601" data-label="Text"><p>→ STOP</p><p>Repair the harness. (<u>Ⓐ4</u>, <u>5</u> - <u>102</u>, <u>107</u>)</p></div>		

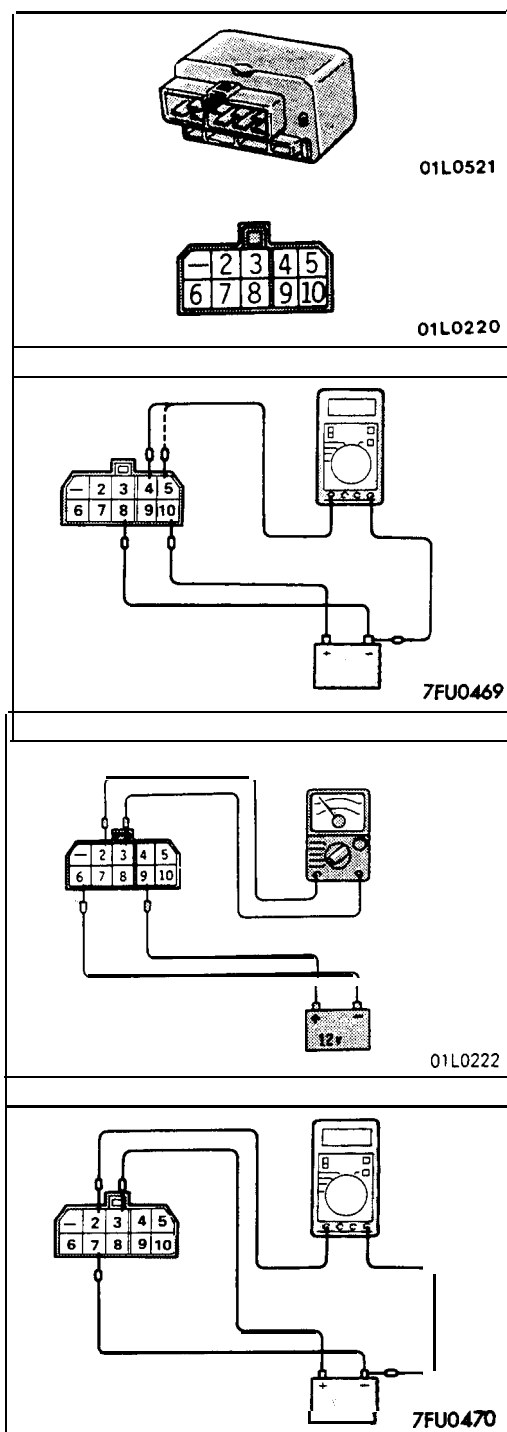**MULTIPORT FUEL INJECTION RELAY INSPECTION**

(1) Remove the multiport fuel injection relay.

(2) Use jumper wires and connect multiport fuel injection relay terminal ⑩ to the battery ⊕ terminal and terminal ⑧ to the battery ⊖ terminal.

Caution

Be very careful when connecting the jumper wires because the relay will be damaged if a mistake is made with the contact terminals.

(3) With battery ⊖ terminal jumper wire connected and disconnected, measure the voltage at multiport fuel injection relay terminals ④ and ⑤.

Jumper wire	Terminal voltage ④	Terminal voltage ⑤
Connection	Battery positive voltage	Battery positive voltage
Not connected	0V	0V

(4) Use jumper wires to connect multiport fuel injection relay terminal ⑨ to the battery ⊕ terminal and terminal ⑥ to the battery ⊖ terminal.

(5) Disconnecting the jumper wire on the terminal ⊖ side of the battery, check whether or not continuity exists across terminals ② and ③ of the multiport fuel injection relay.

Jumper wire	Continuity between terminals ②-③
Connection	Yes
Not connected	No

(6) Use jumper wires and connect multiport fuel injection relay terminal ③ to the battery ⊕ terminal and terminal ⑦ to the battery ⊖ terminal.

(7) With the battery ⊖ terminal jumper wire connected and disconnected, measure the voltage at multiport fuel injection relay terminal ②.

Jumper wire	Terminal Voltage ②
Connection	Battery positive voltage
Not connected	0V




(8) Replace the multiport fuel injection relay if faulty

ENGINE CONTROL MODULE POWER GROUND

M13YDDAAa

Refer to P.13-45.

FUEL PUMP

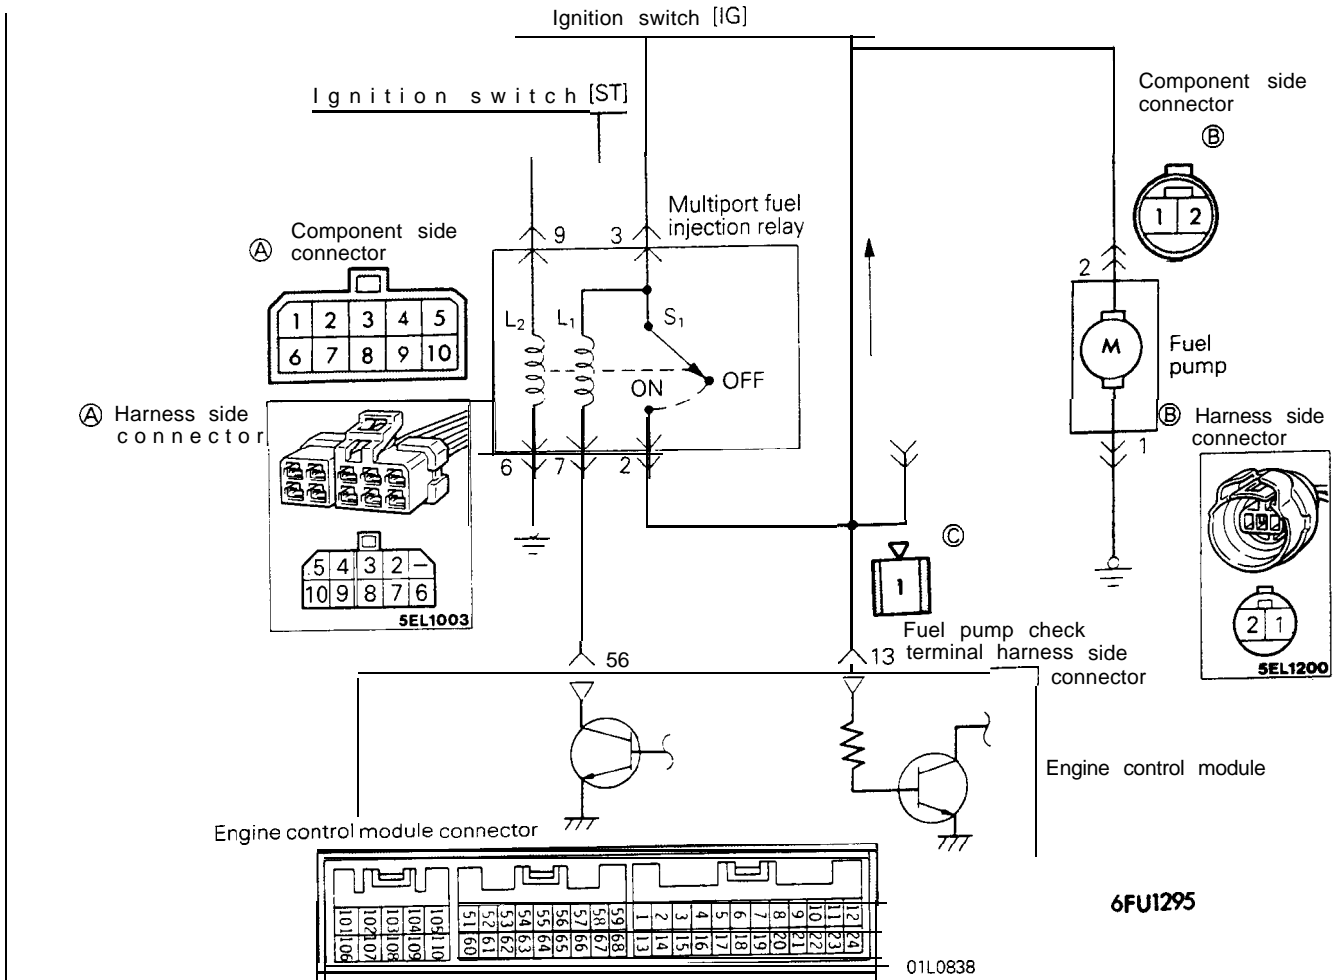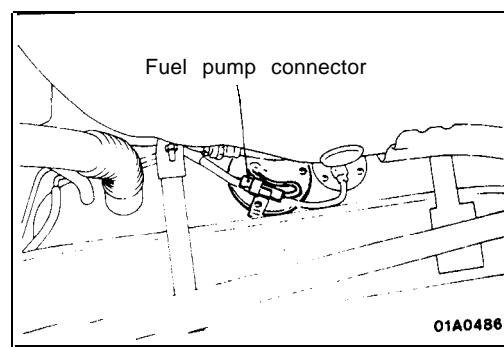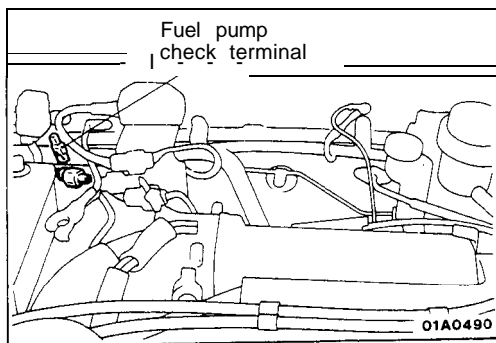

OPERATION





- Activates the fuel pump during engine cranking and while the engine is running.
- When the ignition switch is set to the START position, the current flows, by way of the multiport fuel injection relay coil, from the ignition switch to ground. As a result, the multiport fuel injection relay switch is switched ON, and the power for activation of the fuel pump is supplied, by way of the multiport fuel injection relay switch, from the battery to the fuel pump.
- While the engine is running, the engine control module switches ON the power transistor, after which current flows to the multiport fuel injection relay coil, and the power for activation of the fuel pump is supplied to the fuel pump.
- When the multiport fuel injection relay switch is switched ON, battery voltage is also applied to the engine control module, and so the engine control module detects the fact that the power for activation of the fuel pump is being supplied to the fuel pump.





INSPECTION

Using Scan tool

Function	Item No.	Actuation	Inspection conditions	Description	Normal condition
Actuator test	07	Actuates fuel pump, circulating fuel.	. Engine cranking . Fuel pump forced activation The inspection should be conducted for both of the above conditions.	Hold the return hose between two fingers so as to feel the pulsation of the flowing of fuel.	Pulsation can be felt.
				Listen to the pump sound at a place near the fuel tank.	Pump sound can be heard.

HARNESS INSPECTION

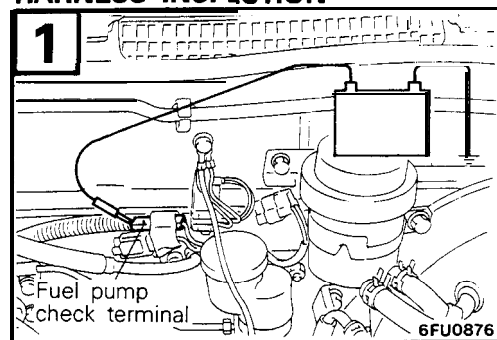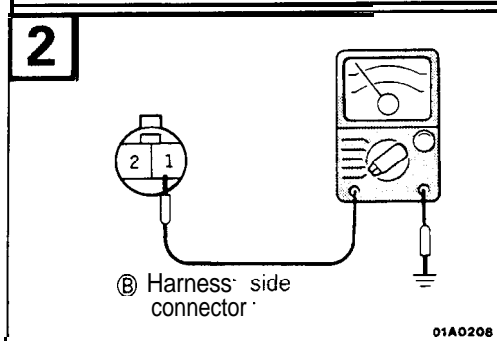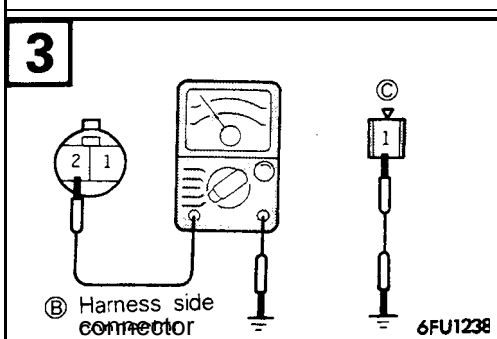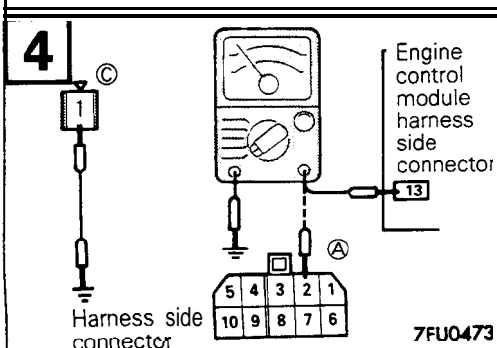1 	<p>Check the fuel pump.</p> <ul style="list-style-type: none"> . Apply battery voltage to the checking terminal and operate the pump. <p>OK → 4</p> <p>✗ → 2</p>
2 	<p>Check the ground circuit of the fuel pump.</p> <p>Connector: Disconnected</p> <p>OK → 3</p> <p>✗ → Repair the harness. (B1) — Ground</p>
3 	<p>Check for continuity between the fuel pump and the checking terminal.</p> <p>Connector: Disconnected</p> <p>OK → 4</p> <p>✗ → Repair the harness. (B2) — (C1)</p>
4 	<p>Check for continuity between the checking terminal and the engine control module, and between the multiport fuel Injection relay terminals.</p> <ul style="list-style-type: none"> . Multiport fuel injection relay connector: Disconnected . Engine control module connector: Disconnected . Fuel pump connector: Disconnected <p>OK → 5</p> <p>✗ → Repair the harness. (A2) — (C1) — (C1-13)</p>

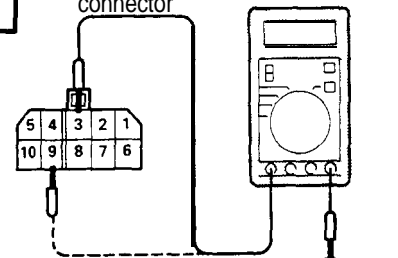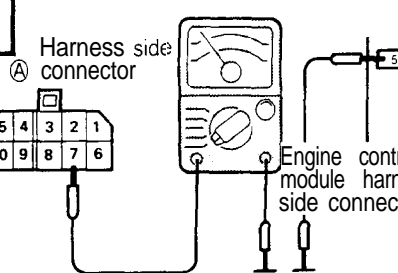
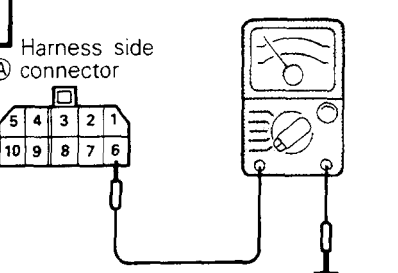
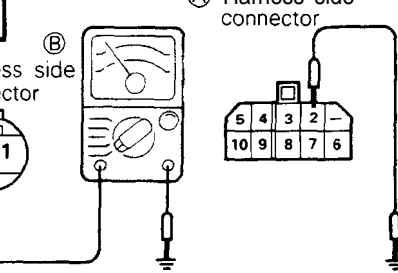
<div><div>5</div><div>(A) Harness side connector</div><div>7FU0474</div></div>	<p>Measure the power supply voltage of the multiport fuel injection relay ignition switch.</p> <p>Connector: Disconnected</p> <ul style="list-style-type: none">Ignition switch: START (A9) when checked)Ignition switch: ON (A3) when checked) <table border="1"><thead><tr><th>Voltage (V)</th></tr></thead><tbody><tr><td>8 or more</td></tr></tbody></table> <div><div>OK</div><div>→</div><div>6</div></div> <div><div>✗</div><div>→</div><div>Repair the harness.</div><div>(Ignition switch [ON] — (A3)</div><div>Ignition switch [ST] — (A9))</div></div>	Voltage (V)	8 or more
Voltage (V)			
8 or more			
<div><div>6</div><div>(A) Harness side connector</div><div>7FU0475</div></div>	<p>Check for an open-circuit, or a short-circuit, to ground between the multiport fuel injection relay and the engine control module.</p> <ul style="list-style-type: none">Multiport fuel injection relay connector: DisconnectedEngine control module connector: Disconnected <div><div>OK</div><div>→</div><div>7</div></div> <div><div>✗</div><div>→</div><div>Repair the harness.</div><div>(A7 — 56)</div></div>		
<div><div>7</div><div>(A) Harness side connector</div><div>7FU0476</div></div>	<p>Check for continuity, of the ground circuit.</p> <ul style="list-style-type: none">Connector: Disconnected. <div><div>OK</div><div>→</div><div>8</div></div> <div><div>✗</div><div>→</div><div>Repair the harness.</div><div>(A6 — Ground)</div></div>		
<div><div>8</div><div>(A) Harness side connector</div><div>(B) Harness side connector</div><div>7FU0477</div></div>	<p>Check for an open-circuit, or a short-circuit to ground, between the multiport fuel injection relay and the fuel pump.</p> <ul style="list-style-type: none">Multiport fuel injection relay connector: DisconnectedFuel pump connector: Disconnected <div><div>OK</div><div>→</div><div>STOP</div></div> <div><div>✗</div><div>→</div><div>Repair the harness.</div><div>(A2 — B2)</div></div>		

MULTIPORT FUEL INJECTION RELAY INSPECTION

Refer to P. 13-257.

VOLUME AIR FLOW SENSOR

M13YFAAa

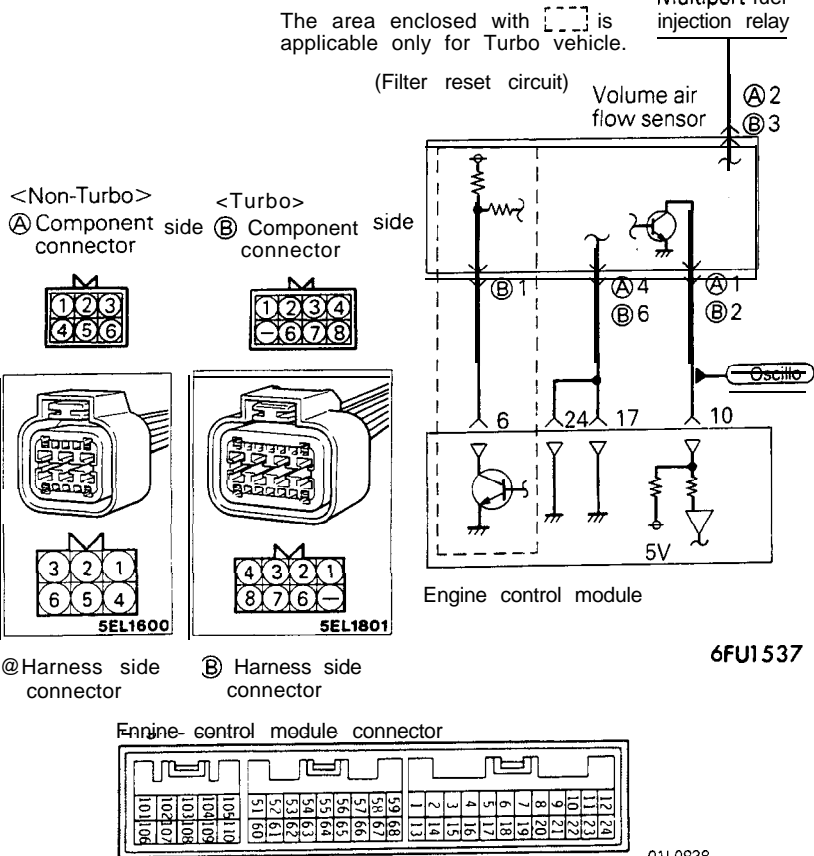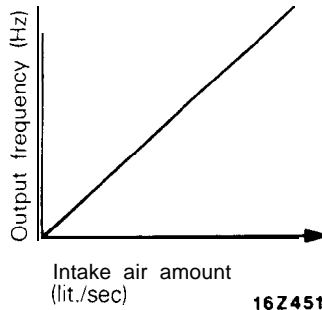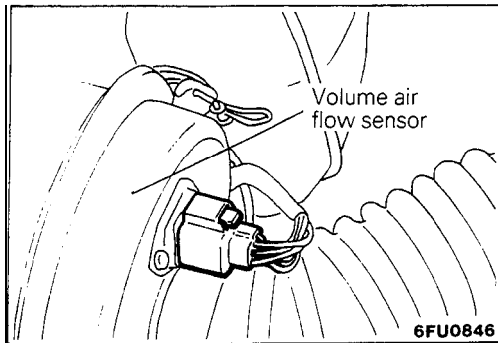

OPERATION

- The volume air flow sensor is incorporated within the air cleaner; it functions to convert the amount of engine air intake to pulse signals of a frequency proportional to the amount of engine air intake, and to input those signals to the engine control module. The engine control module then, based upon those signals, calculates the amount of fuel injection, etc.
- The power for the volume air flow sensor is supplied from the multiport fuel injection relay to the volume air flow sensor, and is grounded at the engine control module. The volume air flow sensor, by intermitting the flow of the 5V voltage applied from the engine control module, produces pulse signals.

TROUBLESHOOTING HINTS

HINT 1:

If the engine sometimes stalls, try starting the engine and shaking the volume air flow sensor harness.

If the engine then stalls, incorrect or improper contact of the volume air flow sensor connector is the probable cause.

Hint 2:

If, when the ignition switch is switched ON (but the engine is not started), the volume air flow sensor output frequency is any value other than zero, a malfunction of the volume air flow sensor or of the engine control module is the probable cause.

Hint 3:

If idling is possible even though the volume air flow sensor output frequency is deviated from the stand-

ard value, the cause is usually a malfunction other than of the volume air flow sensor.

Examples:

- (1) The flow of air within the volume air flow sensor is disturbed. (Air duct disconnection or clogged air cleaner element)
- (2) Incomplete combustion within a cylinder. (Malfunction of spark plugs, ignition coil, injectors, compression pressure, etc.)
- (3) Air is taken into the intake manifold through a leaking gasket, etc.
- (4) Incomplete close contact of the EGR valve seat.


INSPECTION

Using Scan tool

Function	Item No.	Data display	Inspection conditions	Engine condition	Standard value
Data reading	12	Sensor detection air volume (frequency)	. Engine coolant temperature: 85–95°C (185–205°F) . Lights, cooling fan, electrical accessories: OFF . Transaxle: neutral (A/T models: "P" range)	Idling	25–50 Hz <Non-Turbo> 30–50 Hz <Turbo>
				2,000 rpm	60–90 Hz <Non-Turbo> 50–80 Hz <Turbo>
				Racing	Frequency increases as racing rpm increases.

NOTE

The volume air flow sensor output frequency may be about 10% higher than indicated above when the vehicle is new [driven approximately 500 km (300 miles) or less].

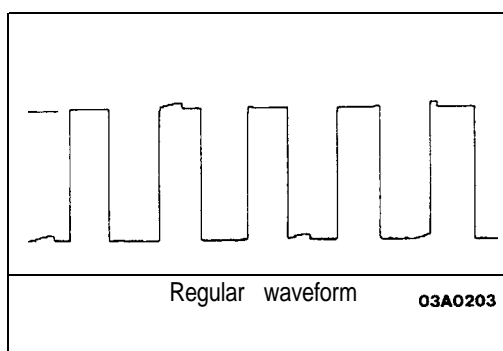

Using Oscilloscope

- (1) Run the engine at idle speed.
- (2) Connect the probe to the oscilloscope pick-up point as shown in the circuit diagram, and check the wave form.

HARNESS INSPECTION

1 <Non-Turbo> <Turbo> Harness side connector 01A0260	Measure the terminal voltage. . Connector: Disconnected . Ignition switch: ON <div style="border: 1px solid black; padding: 5px; margin: 10px auto; width: fit-content;"> Voltage (V) 4.8–5.2 </div> <div style="display: flex; align-items: center; justify-content: center;"> <div style="text-align: center;"> </div> <div style="margin: 0 10px;">→</div> <div style="text-align: center;"> 2 </div> </div> <div style="display: flex; align-items: center; justify-content: center;"> <div style="text-align: center;"> </div> <div style="margin: 0 10px;">→</div> <div> Repair the harness. (A) 1–10 (B) 2–10 </div> </div>	
2 <Non-Turbo> <Turbo> Harness side connector 01A0261	Measure the power supply voltage. . Connector: Disconnected . Ignition switch: ON <div style="border: 1px solid black; padding: 5px; margin: 10px auto; width: fit-content;"> Voltage (V) Battery positive voltage </div> <div style="display: flex; align-items: center; justify-content: center;"> <div style="text-align: center;"> </div> <div style="margin: 0 10px;">→</div> <div style="text-align: center;"> 3 </div> </div> <div style="display: flex; align-items: center; justify-content: center;"> <div style="text-align: center;"> </div> <div style="margin: 0 10px;">→</div> <div> Repair the harness. (A) 2—Multipor fuel injection relay (B) 3—Multipor fuel injection relay) or check the multipor fuel injection relay. </div> </div>	

3 **A**

<Non-Turbo>

<Turbo>

B

Harness side connector

01A0514

Check for continuity of the ground circuit of the VAF sensor.

- Connector: Disconnected

OK

✗

<Non-Turbo>

STOP

<Turbo>

4

(A) 4-17, 24

(B) 6-17, 24

4

Harness side connector **B**

Engine control module harness side connector

01A0580

Check for continuity between the engine control module and volume air flow sensor.

- Engine control module connector: Disconnected
- Volume air flow sensor connector: Disconnected

OK

✗

STOP

Repair the harness.

(B) 1-6

INTAKE AIR TEMPERATURE SENSOR

M13YGAA1

Volume air flow sensor

16L0117

Temperature

16Z455

Output voltage

Temperature

1621008

<Non-Turbo>

Intake air temperature sensor

1FU0306

<Turbo>

Intake air temperature sensor

EC1554

<Non-Turbo>

A Volume air flow sensor connector

A Harness side connector

SEL1600

<Turbo>

B Volume air flow sensor connector

B Harness side connector

SEL1801

Intake air temperature sensor

Engine control module

5V

6FU1298

OPERATION

- The intake air temperature sensor functions to convert the temperature of the air (intaken to the engine) to voltage, and to input that voltage (as signals) to the engine control module. The engine control module, based upon those signals, then corrects the amount of fuel injection, etc.
- The 5V power supply within the engine control module is supplied, by way of the resistance within the unit, to the intake air temperature sensor; it passes through the intake air temperature sensor, which is a type of resistor, and is grounded at the engine control module.

Note that the resistance of the intake air temperature sensor decreases when the temperature of the intake air increases.

- * The intake air temperature sensor terminal voltage becomes higher when the resistance of the intake air temperature sensor increases, and becomes lower when the resistance decreases. Consequently, the intake air temperature sensor terminal voltage varies in accordance with the temperature of the intake air, becoming lower when the temperature of the intake air increases.



TROUBLESHOOTING HINTS

Because the intake air temperature sensor detects the temperature of the intake air in the air cleaner, it indicates a temperature different than the temperature of the outside air when the engine is running.


INSPECTION**Using Scan tool**

Function	Item No.	Data display	Check conditions	Intake air temp.	Standard value
Data reading	13	Sensor detection temperature	Ignition switch: ON Or, engine running	At -20°C (-4°F)	-20°C
				At 0°C (32°F)	0°C
				At 20°C (68°F)	20°C
				At 40°C (104°F)	40°C
				At 80°C (176°F)	80°C

HARNESS INSPECTION

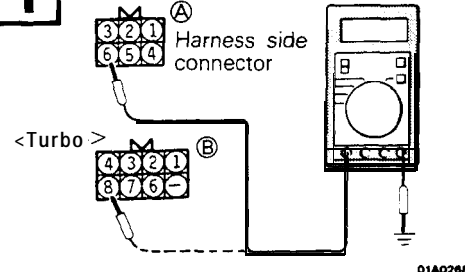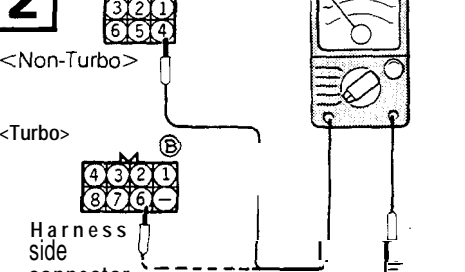
1 <Non-Turbo>  <p>① Harness side connector</p> <p><Turbo> ②</p> <p>01A0268</p>	<p>Measure the power supply voltage.</p> <ul style="list-style-type: none"> • Connector: Disconnected • Ignition switch: ON <table border="1" style="margin: 10px auto;"> <tr><th>Voltage (V)</th></tr> <tr><td>4.5–4.9</td></tr> </table> <p>OK → 2</p> <p>✗ → Repair the harness. (A) 6–8 (B) 8–8</p>	Voltage (V)	4.5–4.9
Voltage (V)			
4.5–4.9			
2 <Non-Turbo>  <p>① Harness side connector</p> <p><Turbo> ②</p> <p>01A0514</p>	<p>Check for continuity of the ground circuit of the intake air temperature sensor.</p> <ul style="list-style-type: none"> • Connector: Disconnected <p>OK → STOP</p> <p>✗ → Repair the harness. (A) 4–17, 24 (B) 6–17, 24</p>		

<Non-Turbo>

Volume air flow sensor
side connector

6FU0622

<Turbo>

Volume air flow sensor
side connector


6FU0623

SENSOR INSPECTION

- (1) Disconnect the volume air flow sensor connectors.
- (2) Measure resistance between terminals ④ and ⑥. <Non-Turbo>
- (3) Measure resistance between terminals ⑥ and ⑧. <Turbo>

Temperature °C (°F)	Resistance (kΩ)
0 (32)	6.0
20 (68)	2.7
80 (176)	0.4

<Non-Turbo>

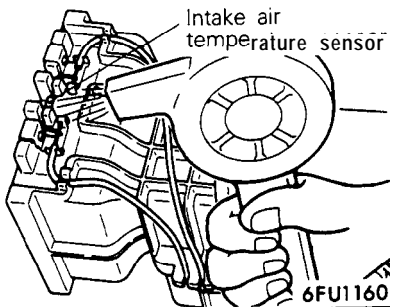
Intake air
temperature sensor

6FU1160

- (3) Measure resistance while heating the sensor using a hair drier.

Temperature °C (°F)	Resistance (kΩ)
Higher	Smaller

<Turbo>

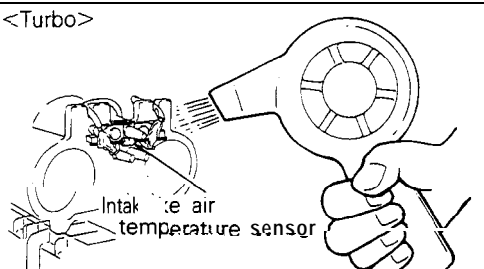
Intake air
temperature sensor

ECI600

- (4) If the value deviates from the standard value or the resistance remains unchanged, replace the volume air flow sensor assembly.

BAROMETRIC PRESSURE SENSOR

M13YHAA1

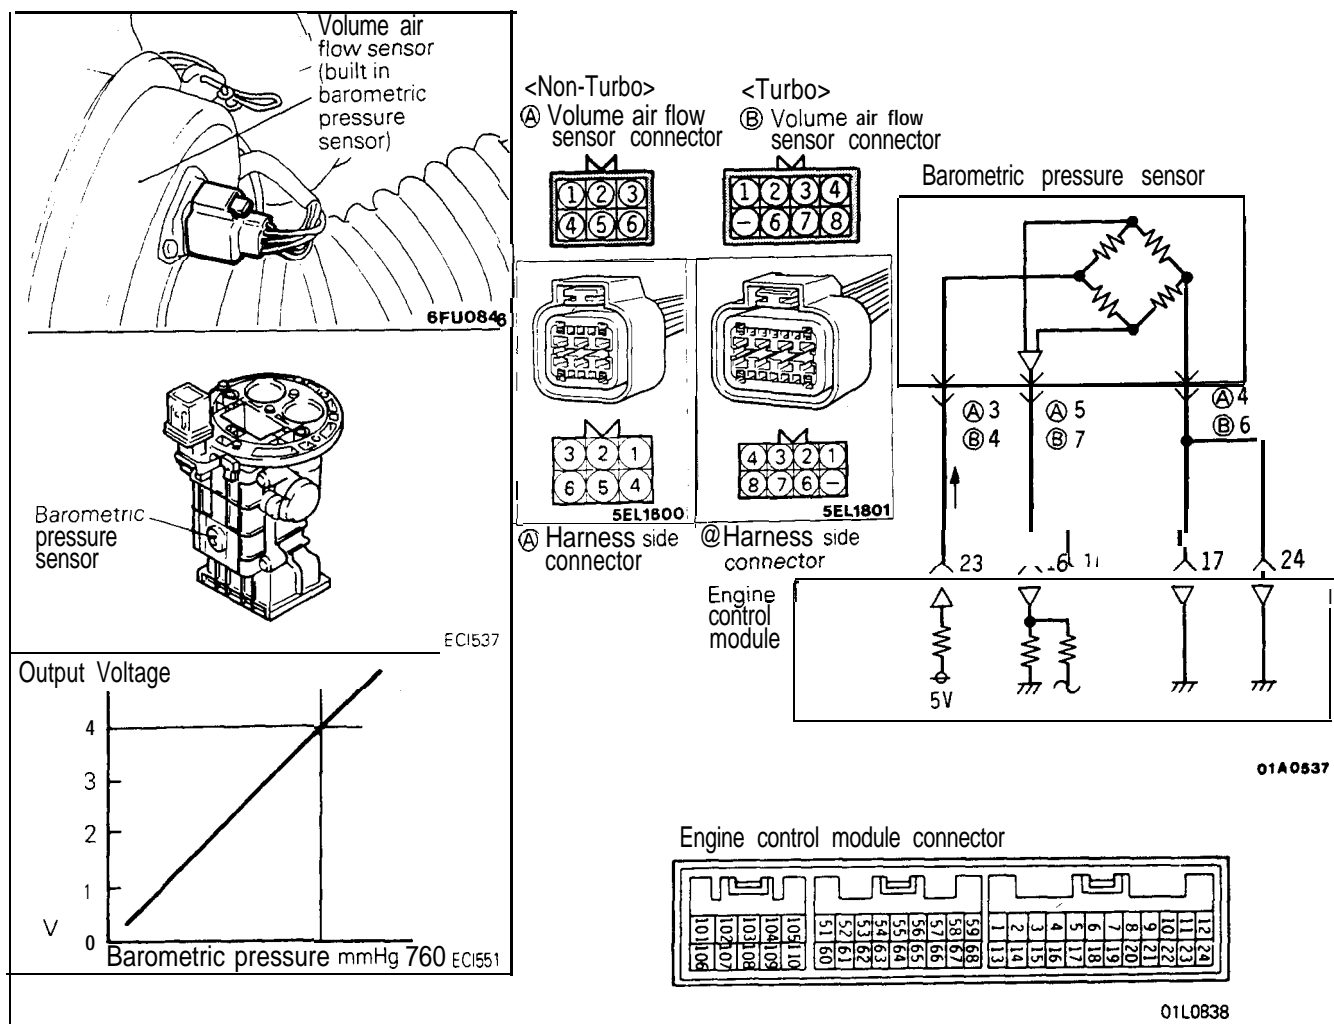

OPERATION

- The barometric-pressure sensor functions to convert the barometric pressure to voltage, and to input that voltage (as signals) to the engine control module. The engine control module, based upon those signals, then corrects the amount of fuel injection, etc.

- The 5V power supply within the engine control module is supplied to the barometric-pressure sensor; it passes through the circuitry within the sensor, and is grounded at the engine control module.
- The barometric-pressure sensor output voltage is sent to the engine control module in proportion to the barometric pressure (absolute pressure).

TROUBLESHOOTING HINTS

Hint 1:

If there is a malfunction of the barometric-pressure sensor, driveability of the vehicle will become worse particularly at high altitude.

Hint 2:

If, during high-speed driving, there is a noticeable sharp drop of the displayed pressure of the barometric-pressure sensor, check for clogging of the air cleaner.

INSPECTION

Using Scan tool




Function	Item No.	Data display	Check conditions	Altitude	Standard value
Data reading	25	Sensor detection pressure	Ignition switch: ON	At 0 m (0 ft.)	760 mmHg
				At 600 m (1,969 ft.)	710 mmHg
				At 1,200 m (3,937 ft.)	660 mmHg
				At 1,800 m (5,906 ft.)	610 mmHg

HARNESS INSPECTION

<p>1</p> <p><Non-Turbo></p> <p><Turbo></p> <p>Harness side connector</p> <p>01A0514</p>	<p>Check for continuity of the ground circuit.</p> <p>Connector: Disconnected¹</p> <p>OK → 2</p> <p>✗ → Repair the harness. (A) 4-17, 24 (B) 6-17, 24</p>			
<p>2</p> <p><Non-Turbo></p> <p><Turbo></p> <p>Harness side connector</p> <p>01A0274</p>	<p>Measure the power supply voltage or the barometric pressure sensor.</p> <p>Connector: Disconnected</p> <p>Ignition switch: ON</p> <table border="1"> <tr> <th>Voltage (V)</th> </tr> <tr> <td>4.8-5.2</td> </tr> </table> <p>OK → 3</p> <p>✗ → Repair the harness. (A) 3-24 (B) 4-24</p>	Voltage (V)	4.8-5.2	
Voltage (V)				
4.8-5.2				
<p>3</p> <p>Harness side connector</p> <p>Engine control module harness side connector</p> <p><Non-Turbo></p> <p><Turbo></p> <p>01A0267</p>	<p>Check for an open-circuit, or a short-circuit to ground, between the engine control module and the barometric pressure sensor.</p> <p>Volume air flow sensor connector: Disconnected</p> <p>Engine control module connector: Disconnected</p> <p>OK → STOP</p> <p>✗ → Repair the harness. (A) 5-18 (B) 7-18</p>			

ENGINE COOLANT TEMPERATURE SENSOR

M13Y1AB1

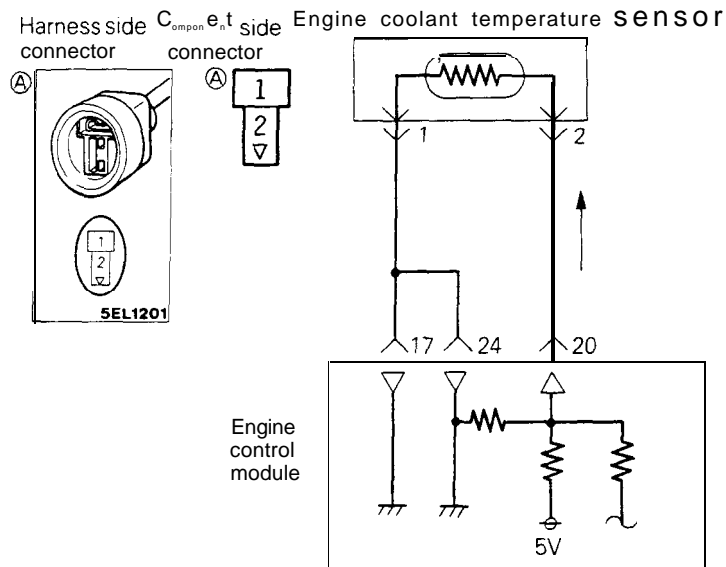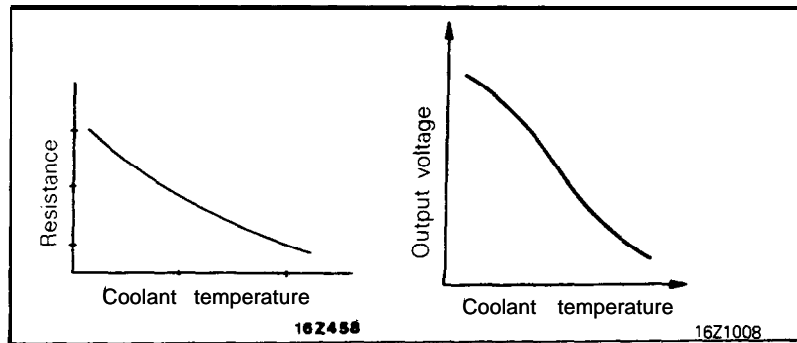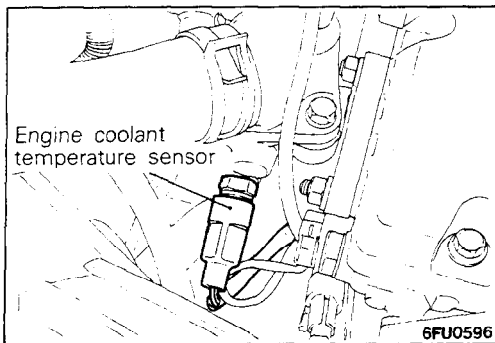

6FU1239

OPERATION

- The engine coolant temperature sensor functions to convert the barometric pressure to voltage, and to input that voltage (as signals) to the engine control module. The engine control module, based upon those signals, regulates the amount of fuel injection and the fast-idling speed when the engine is cold.
- The 5V power supply within the engine control module is supplied, by way of the resistance within the unit, to the engine coolant temperature sensor; it passes through the engine coolant temperature sensor, which is a type of resistor, and is grounded at the engine control module.

Note that the resistance of the engine coolant temperature sensor decreases when the temperature of the coolant increases.

- The engine coolant temperature sensor terminal voltage becomes higher when the resistance of the engine coolant temperature sensor increases, and becomes lower when the resistance decreases. Consequently, the engine coolant temperature sensor terminal voltage varies in accordance with the temperature of the coolant, becoming lower when the temperature of the coolant increases.

TROUBLESHOOTING HINTS

If, during engine warm-up, the fast-idling speed is not correct, or black smoke is emitted, the problem

is usually a malfunction of the engine coolant temperature sensor.


INSPECTION

Using Scan tool

Function	Item No.	Data display	Check conditions	Coolant temperature	Standard value
Data reading	21	Sensor detection temperature	Ignition switch: ON Or, engine running	At -20°C (-4°F)	-20°C
				At 0°C (32°F)	0°C
				At 20°C (68°F)	20°C
				At 40°C (104°F)	40°C
				At 80°C (176°F)	80°C

HARNESS INSPECTION

1

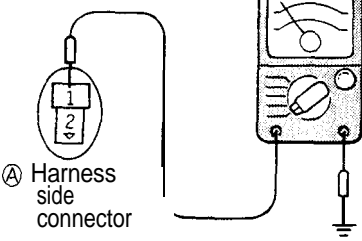

① Harness side connector

01L0463

Check for continuity of the ground circuit.

- Connector: Disconnected

OK

→

2


✗

→

Repair the harness.

(A 1-17, 24)

2

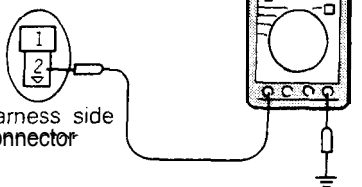

① Harness side connector

01L0461

Measure the power supply voltage.

- Connector: Disconnected
- Ignition switch: ON

Voltage (V)
4.5-4.9

OK

→

STOP

✗


→

Repair the harness.

(A 1-20)

SENSOR INSPECTION

- (1) Remove engine coolant temperature sensor from the intake manifold.
- (2) With temperature sensing portion of engine coolant temperature sensor immersed in hot water check resistance.

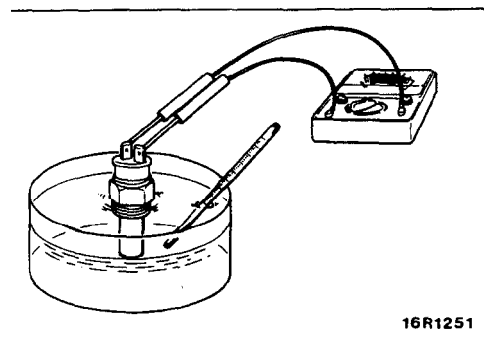

Temperature °C (°F)	Resistance (kΩ)
0 (32)	5.9
20 (68)	2.5
40 (104)	1.1
80 (176)	0.3

- (3) If the resistance deviates from the standard value greatly replace the sensor.

INSTALLATION

- (1) Apply sealant 3M NUT locking No.4171 or equivalent to threaded portion.
- (2) Install engine coolant temperature sensor and tighten it to specified torque.



Sensor tightening torque:

20–40 Nm (15-29 ft.lbs.)


- (3) Fasten harness connectors securely.

THROTTLE POSITION SENSOR <1989 models>

M13YJAE1

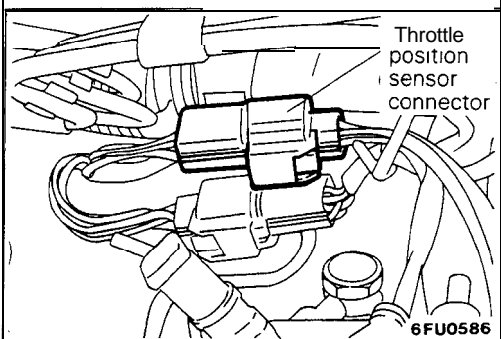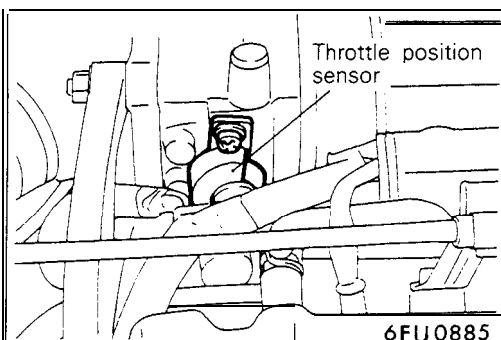


Terminal voltage [V]

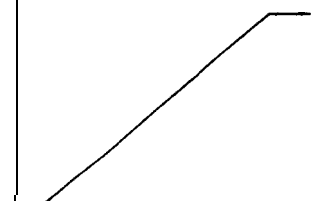

Minimum Maximum

Throttle shaft turning angle

16Z461

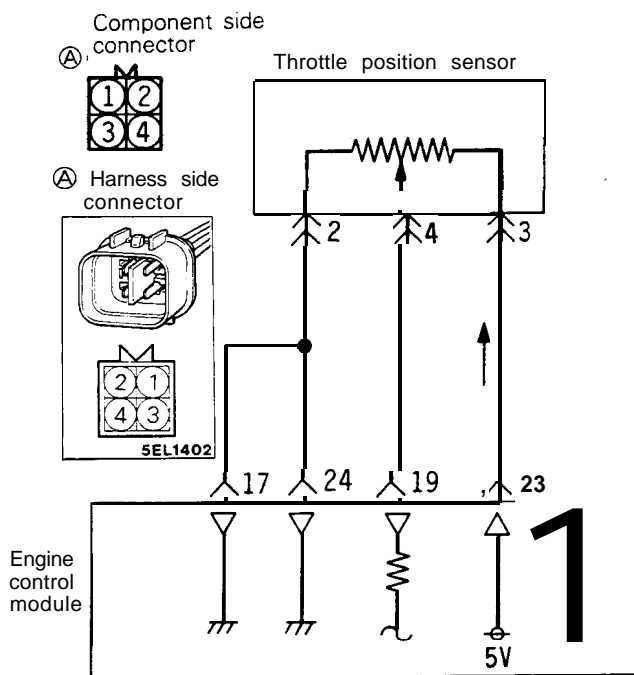

01A0527

Engine control module connector

101106	102108	103109	104109	105110	51160	52161	53162	54163	55164	56165	57166	58167	59168	1	2	3	4	5	6	7	8	9	10	11	12	24
--------	--------	--------	--------	--------	-------	-------	-------	-------	-------	-------	-------	-------	-------	---	---	---	---	---	---	---	---	---	----	----	----	----

01L0838

OPERATION

- The throttle-position sensor functions to convert the degree of opening of the throttle valve to voltage, and to input that voltage (as signals) to the engine control module. The engine control module, based upon those signals, then regulates the amount of fuel injection, etc.
- The 5V power supply within the engine control module is supplied to the throttle-position sensor, after which it passes through the resistance within the sensor and is grounded at the engine control module.
- When the throttle valve shaft is rotated all the way from the idling position to the fully open position, the resistance between the throttle-position sensor's variable-resistance terminal and the ground terminal also increases in accordance with that rotation, and, as a result, the voltage of the throttle-position sensor's variable-resistance terminal also becomes higher in accordance with that rotation.

TROUBLESHOOTING HINTS

Hint 1:

The signals of the throttle-position sensor are more important for control of the automatic transaxle than for control of the engine; shifting “impact shocks” are produced if there is a malfunction of the throttle-position sensor.

Hint 2:

If the voltage of the throttle-position sensor deviates from the standard value, check once again after making the throttle-position sensor adjustment. In addition, if there are any indications that the fixed SAS has been moved, adjust the fixed SAS.


INSPECTION

Using Scan tool

Function	Item No.	Data display	Inspection conditions	Throttle valve	Standard value
Data reading	14	Sensor detection voltage	Ignition switch: ON	To idle position	450–550 mV
				Gradually opening	Becomes higher proportional to valve opening.
				To fully open	4,500–5,500 mV

HARNESS INSPECTION

1

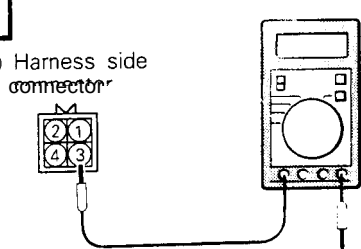

01A0510

Measure the power supply voltage of the TPS.

- Connector: Disconnected
- Ignition switch: ON

Voltage (V)
4.8–5.2

OK

→


2

✗

→

Repair the harness.
(A1–23)

2

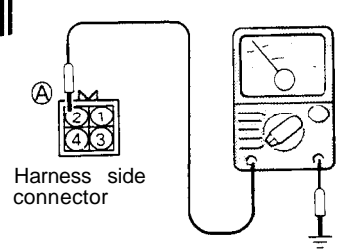

01A0511

Check for continuity of the ground circuit of the TPS.

- Connector: Disconnected

OK

→


3

✗

→

Repair the harness.
(A2–17, 24)

3

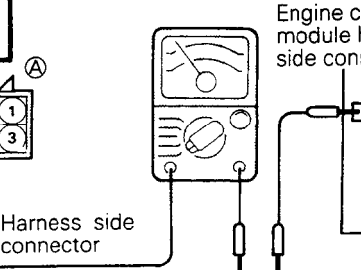

6FU1299

Check for an open-circuit, or a short-circuit to ground, between the engine control module and the throttle position sensor.

- Throttle position sensor connector: Disconnected
- Engine control module connector: Disconnected

OK


→

△

✗

→

Repair the harness.
(A4–19)

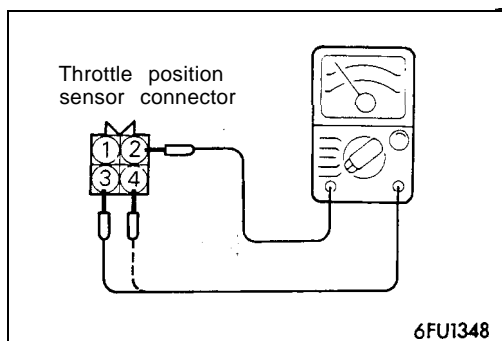**SENSOR INSPECTION**

- (1) Disconnect the throttle position sensor connector.
- (2) Measure resistance between terminal ② (sensor ground) and terminal ③ (sensor power).

Standard value: 3.5-6.5 kΩ




- (3) Connect a pointer type ohmmeter between terminal ② (sensor ground) and terminal ④ (sensor output).
- (4) Operate the throttle valve slowly from the idle position to the full open position and check that the resistance changes smoothly in proportion with the throttle valve opening angle.
- (5) If the resistance is out of specification, or fails to change smoothly, replace the throttle position sensor.

Throttle position sensor installation torque:


1.5-2.5 Nm (1.1-1.8 ft.lbs.)

THROTTLE POSITION SENSOR <From 1990 models>

M13YJAF1

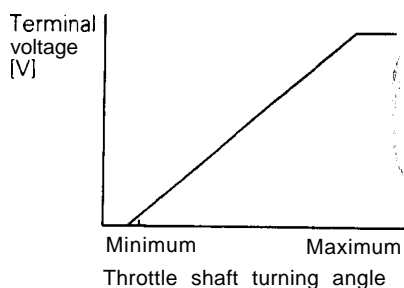
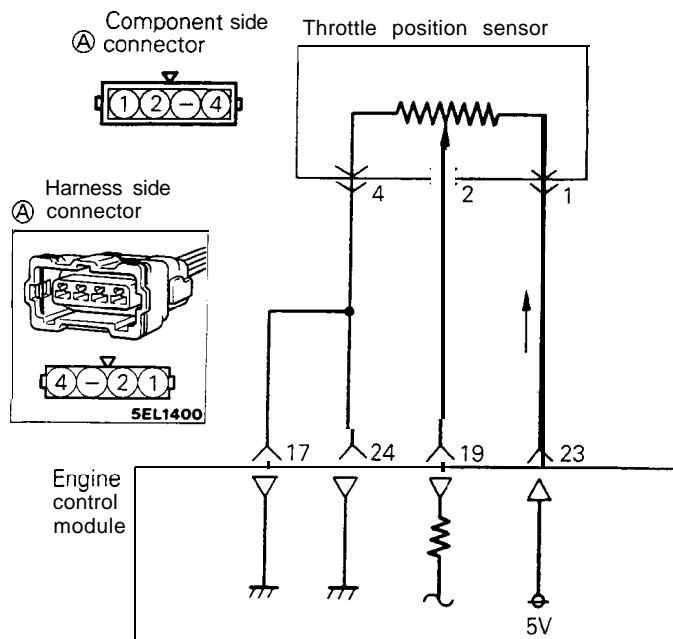
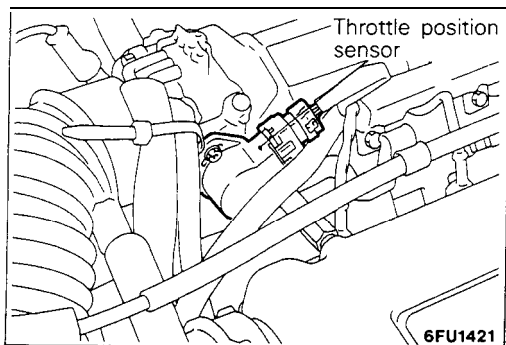



Engine control module connector

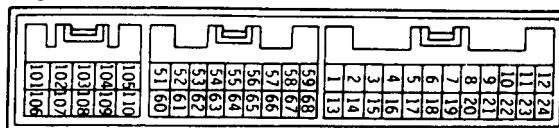**OPERATION****TROUBLESHOOTING HINTS****INSPECTION-Using Scan tool**

Refer to P.13-270.

HARNESS INSPECTION
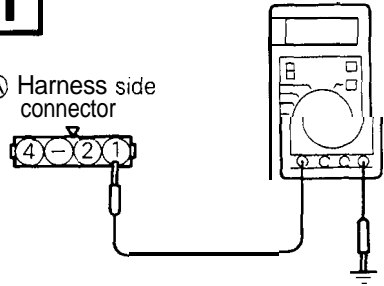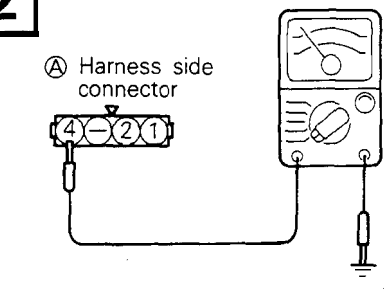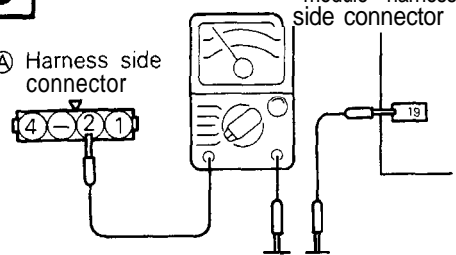
<div data-bbox="148 225 201 283">1</div> <div data-bbox="148 321 328 372">Ⓐ Harness side connector</div>  <div data-bbox="553 526 626 542">6FU1241</div>	<p>Measure the power supply voltage of the throttle position sensor.</p> <ul style="list-style-type: none">Connector: DisconnectedIgnition switch: ON <table border="1" data-bbox="700 379 1063 515"><thead><tr><th>Voltage (V)</th></tr></thead><tbody><tr><td>4.8–5.2</td></tr></tbody></table> <div data-bbox="1125 283 1230 385">OK → <div data-bbox="1349 304 1409 362">2</div></div> <div data-bbox="1125 410 1230 511">✗ → Repair the harness. (A1–23)</div>	Voltage (V)	4.8–5.2	
Voltage (V)				
4.8–5.2				
<div data-bbox="148 573 201 631">2</div> <div data-bbox="148 658 328 712">Ⓐ Harness side connector</div>  <div data-bbox="553 886 626 901">6FU1242</div>	<p>Check for continuity of the ground circuit.</p> <ul style="list-style-type: none">Connector: Disconnected <div data-bbox="1125 642 1230 743">OK → <div data-bbox="1349 665 1409 723">3</div></div> <div data-bbox="1125 770 1230 870">✗ → Repair the harness. (A4–17, 24)</div>			
<div data-bbox="148 934 201 992">3</div> <div data-bbox="148 1033 328 1087">Ⓐ Harness side connector</div> <div data-bbox="460 948 626 1019">Engine control module harness side connector</div>  <div data-bbox="553 1245 626 1261">6FU1243</div>	<p>Check for an open-circuit, or a short-circuit to ground, between the engine control module and the throttle position sensor.</p> <ul style="list-style-type: none">Throttle position sensor connector: DisconnectedEngine control module connector: Disconnected <div data-bbox="1125 1002 1230 1102">OK → <div data-bbox="1329 1006 1422 1091">STOP</div></div> <div data-bbox="1125 1129 1230 1230">✗ → Repair the harness. (A2–19)</div>			

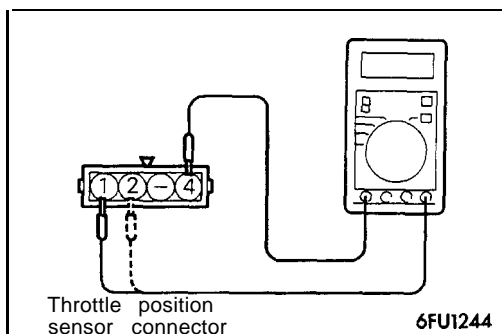

SENSOR INSPECTION

- (1) Disconnect the throttle position sensor connector.
- (2) Measure resistance between terminal ④ (sensor ground) and terminal ① (sensor power).





Standard value: 3.5-6.5 kΩ

- (3) Connect a pointer type ohmmeter between terminal ④ (sensor ground terminal) and terminal ② (sensor output terminal).
- (4) Operate the throttle valve slowly from the idle position to the full open position and check that the resistance changes smoothly in proportion with the throttle valve opening angle.
- (5) If the resistance is out of specification, or fails to change smoothly, replace the throttle position sensor.

Throttle position sensor installation torque:

1.5-2.5 Nm (1.1-1.8 ft.lbs.)

CLOSED THROTTLE POSITION SWITCH <1989 models>

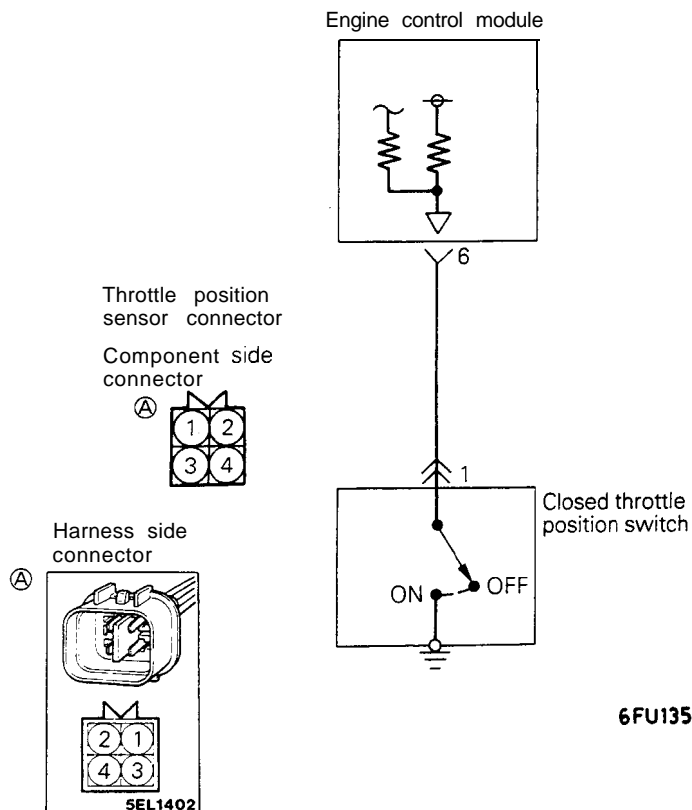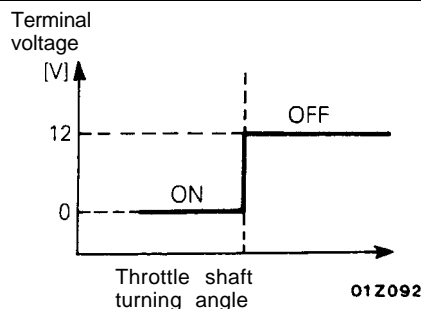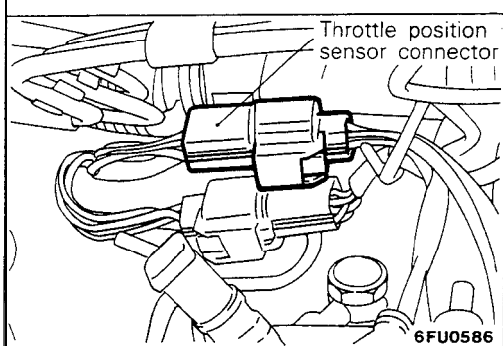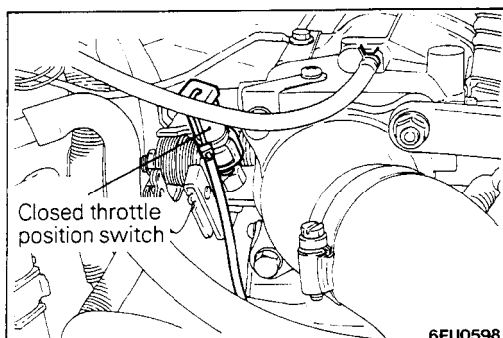

OPERATION

- The closed throttle position switch functions to convert (to HIGH/LOW-level voltage) data as to whether the accelerator is depressed or released, and to input that voltage (as signals) to the engine control module. The engine control module, based upon those signals, regulates the idle air control motor.

- Voltage within the engine control module is applied, by way of the resistance, to the closed throttle position switch. When the foot is taken off the accelerator, the closed throttle position switch is switched ON, so the current is grounded. As a result, the closed throttle position terminal voltage changes from HIGH to LOW level.

TROUBLESHOOTING HINTS

If there is an abnormal condition of the closed throttle position switch output even though the results of the checking of the closed throttle position switch harness and of the component itself indicate a normal condition, the cause may be presumed to be one of the following.


- Improper adjustment of the accelerator cable or the automatic-cruise-control cable.
- Improper adjustment of the closed throttle position switch (fixed SAS).

INSPECTION**Using Scan tool**

Function	Item No.	Data display	Inspection conditions	Throttle valve	Normal indication
Data reading	26	Switch status	Ignition switch: ON (Check after pumping accelerator several times.)	To idle position	ON
				Slightly opened	OFF

HARNESS INSPECTION

1

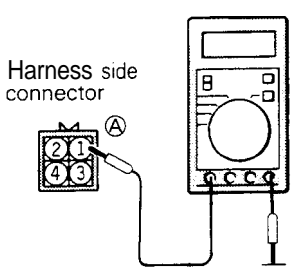

Harness side connector

01A0271

Measure the power supply voltage of the closed throttle position switch.
Connector: Disconnected
Ignition switch: ON

Voltage (V)
4 or more

OK


→

STOP

✗

→

Repair the harness.
(A①-⑥)

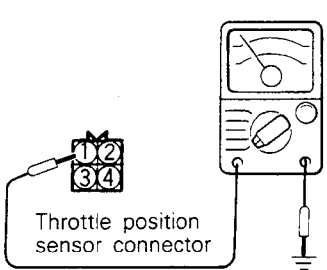

Throttle position sensor connector

01A0270

SENSOR INSPECTION

- (1) Disconnect the throttle position sensor connector
- (2) Check the continuity between terminal ① and body ground.



Accelerator pedal	Continuity
Depressed	Non-conductive ($\infty \Omega$)
Released	Conductive (0Ω)

- (3) If out of specification, replace the throttle position sensor assembly.

TSB Revision


CLOSED THROTTLE POSITION SWITCH <From 1990 models>

M13YKAF1

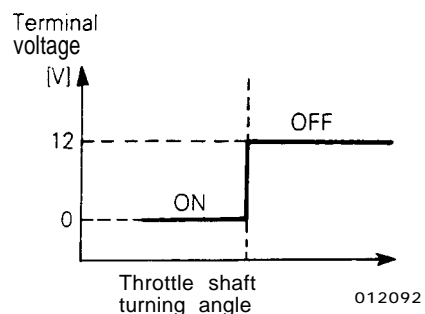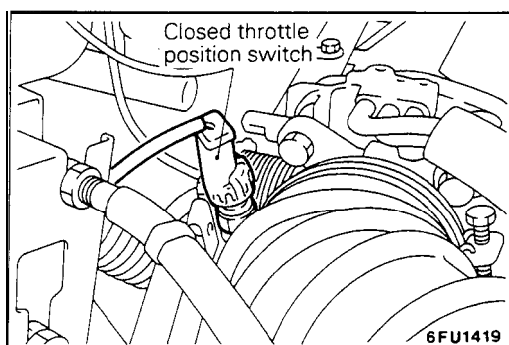


Closed throttle position switch terminal

Engine control module

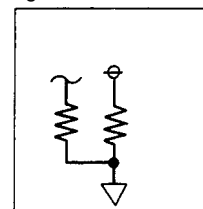

6

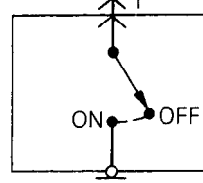

Closed throttle position switch

6FU13 56


OPERATION

TROUBLESHOOTING HINTS

INSPECTION-Using Scan tool

Refer to P.13-274.

HARNESS INSPECTION

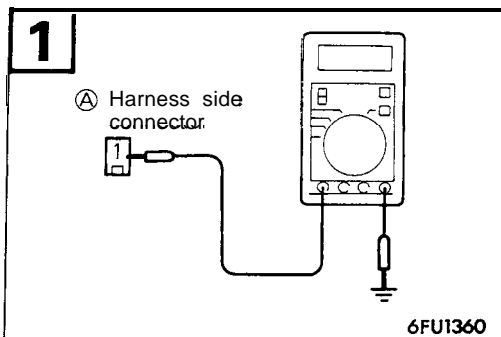


Measure the power supply voltage of the closed throttle position switch.

- Connector: Disconnected
- Ignition switch: ON

Voltage (V)
4 or more



Repair the harness.
(A1-6)

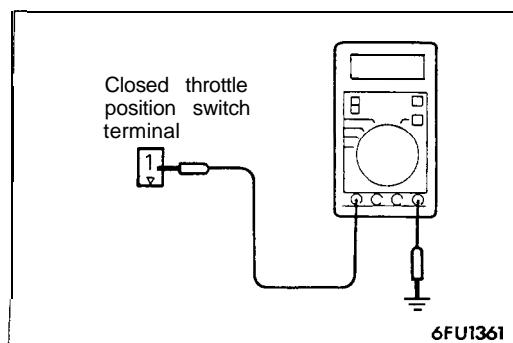

SENSOR INSPECTION




- (1) Disconnect the closed throttle position switch connector.
- (2) Check the continuity between terminal ① and sensor ground.

Accelerator pedal	Continuity
Depressed	Non-conductive ($\infty \Omega$)
Released	Conductive (0Ω)



- (3) If out of specification, replace the closed throttle position switch.

CAMSHAFT POSITION SENSOR <Up to 1990 models>

M13YLAAa

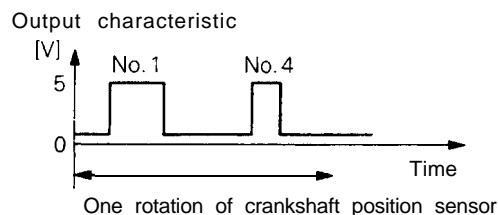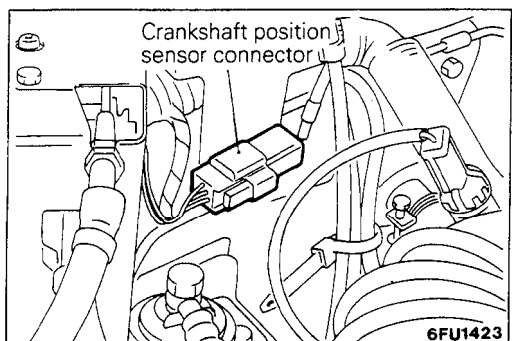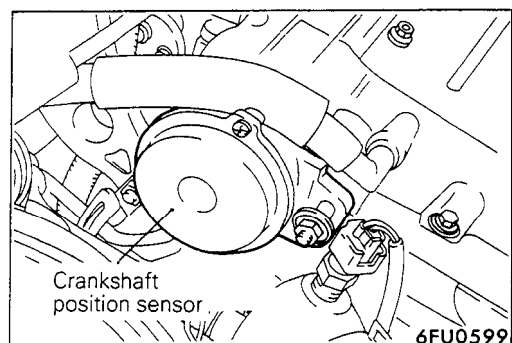

01A0528

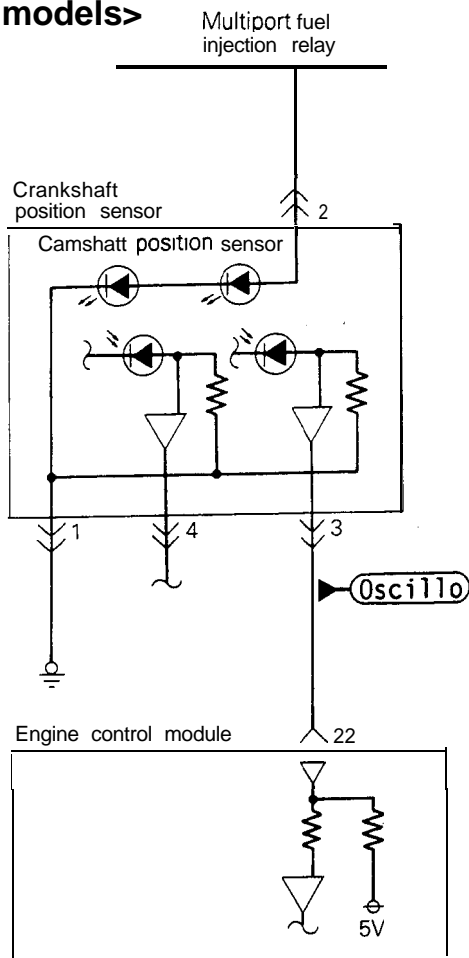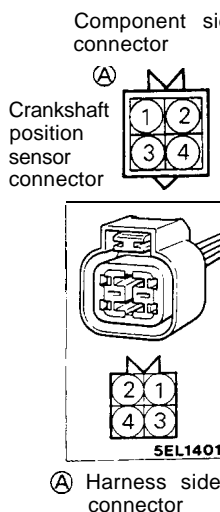

6FU1255


OPERATION

- The camshaft position sensor functions to detect the top dead center position of the No.1 cylinder and to convert those data to pulse signals that are input to the engine control module. The engine control module, based upon those signals, calculates the sequence of fuel injection.
- The power for the camshaft position sensor is supplied from the multiport fuel injection relay and is grounded to the vehicle body. The camshaft position sensor, by intermitting the flow (to ground) of the 5V voltage applied from the engine control module produces pulse signals.

TROUBLESHOOTING HINTS

If there is a malfunction of the camshaft position sensor, the sequential injection will not be correct,

resulting in such problems as engine stalling, unstable idling, and poor acceleration.



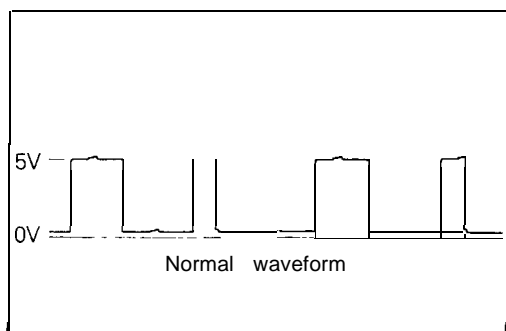


INSPECTION

Using Oscilloscope




- Run the engine at an idle speed.
- Connect the probe to the oscilloscope pick-up point as shown in the circuit diagram, and check the waveform.

HARNESS INSPECTION
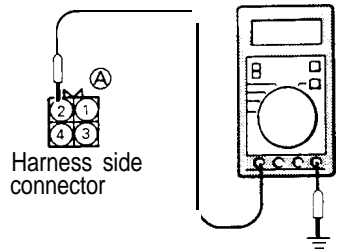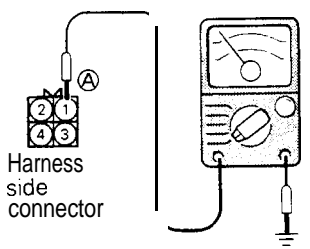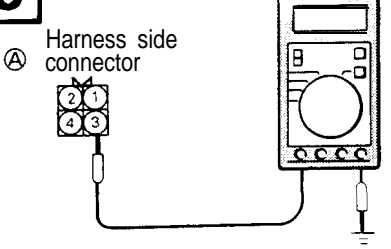
<div data-bbox="170 238 235 300">1</div>  <p>Harness side connector</p> <p>01A0512</p>	<p>Measure the power supply voltage.</p> <ul style="list-style-type: none"> Connector: Disconnected Ignition switch: ON <table border="1" data-bbox="722 362 1079 497"> <thead> <tr> <th>Voltage (V)</th> </tr> </thead> <tbody> <tr> <td>Battery positive voltage</td> </tr> </tbody> </table> <div data-bbox="1144 290 1242 383">OK</div> <div data-bbox="1144 414 1242 486">✗</div>	Voltage (V)	Battery positive voltage	<div data-bbox="1372 310 1429 362">2</div> <p>Repair the harness. (A2)–Multi-port fuel injection relay</p>
Voltage (V)				
Battery positive voltage				
<div data-bbox="170 590 235 652">2</div>  <p>Harness side connector</p> <p>01A0513</p>	<p>Check for continuity of the ground circuit.</p> <p>Connector: Disconnected</p> <div data-bbox="1144 652 1242 745">OK</div> <div data-bbox="1144 777 1242 849">✗</div>	<div data-bbox="1372 673 1429 725">3</div> <p>Repair the harness. (A1)–Ground</p>		
<div data-bbox="170 953 235 1015">3</div>  <p>Harness side connector</p> <p>01L0411</p>	<p>Check the output circuit voltage.</p> <ul style="list-style-type: none"> Connector: Disconnected Ignition switch: ON <table border="1" data-bbox="722 1087 1079 1232"> <thead> <tr> <th>Voltage (V)</th> </tr> </thead> <tbody> <tr> <td>4.8–5.2</td> </tr> </tbody> </table> <div data-bbox="1144 1025 1242 1118">OK</div> <div data-bbox="1144 1149 1242 1222">✗</div>	Voltage (V)	4.8–5.2	<div data-bbox="1347 1025 1437 1108">STOP</div> <p>Repair the harness. (A3)–(2)</p>
Voltage (V)				
4.8–5.2				

CAMSHAFT POSITION SENSOR <From 1991 models>

M13YLAB1

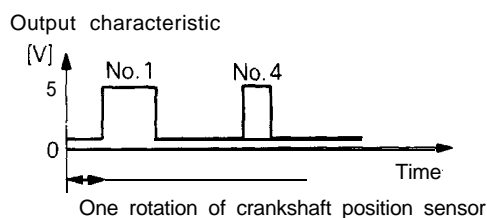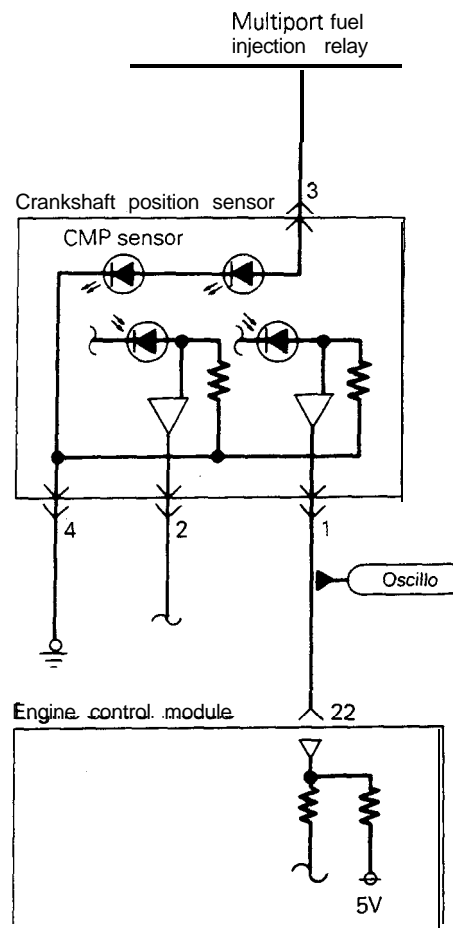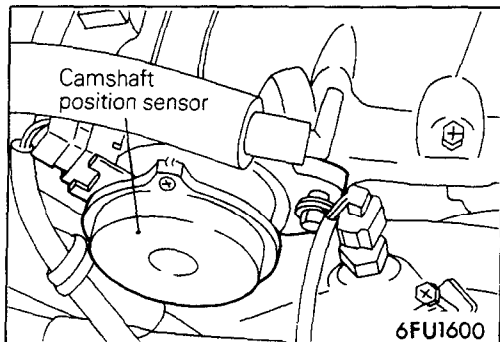

01A0528

7FU0493

OPERATION

TROUBLESHOOTING HINTS

INSPECTION-Using Oscilloscope

Refer to P.13-277.

HARNESS INSPECTION

1 Harness side connector
Ⓐ

7FU0496



Measure the power supply voltage.

- Connector: Disconnected
- Ignition switch: ON

Voltage (V)
Battery positive voltage





OK → **2**

✗ → Repair the harness.
(Ⓐ③) - Multiport fuel injection relay)
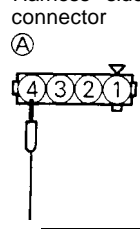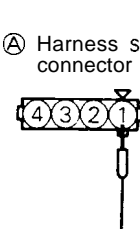
<p>2 Harness side connector Ⓐ</p>  <p>7FU0497</p>	<p>Check for continuity of the ground circuit. · Connector: Disconnected</p> <p>OK → 3</p> <p>✗ → Repair the harness. (Ⓐ4—Ground)</p>			
<p>3 Ⓐ Harness side connector</p>  <p>7FU0498</p>	<p>Check the output circuit voltage. · Connector: Disconnected · Ignition switch: ON</p> <table border="1" data-bbox="714 673 1079 818"> <tr> <th>Voltage (V)</th> </tr> <tr> <td>4.8–5.2</td> </tr> </table> <p>OK → STOP</p> <p>✗ → Repair the harness. (Ⓐ1–2)</p>	Voltage (V)	4.8–5.2	
Voltage (V)				
4.8–5.2				

CRANKSHAFT POSITION SENSOR <Up to 1990 models>

M13YMAA1

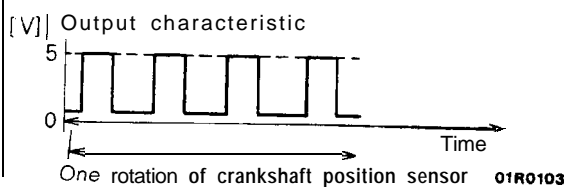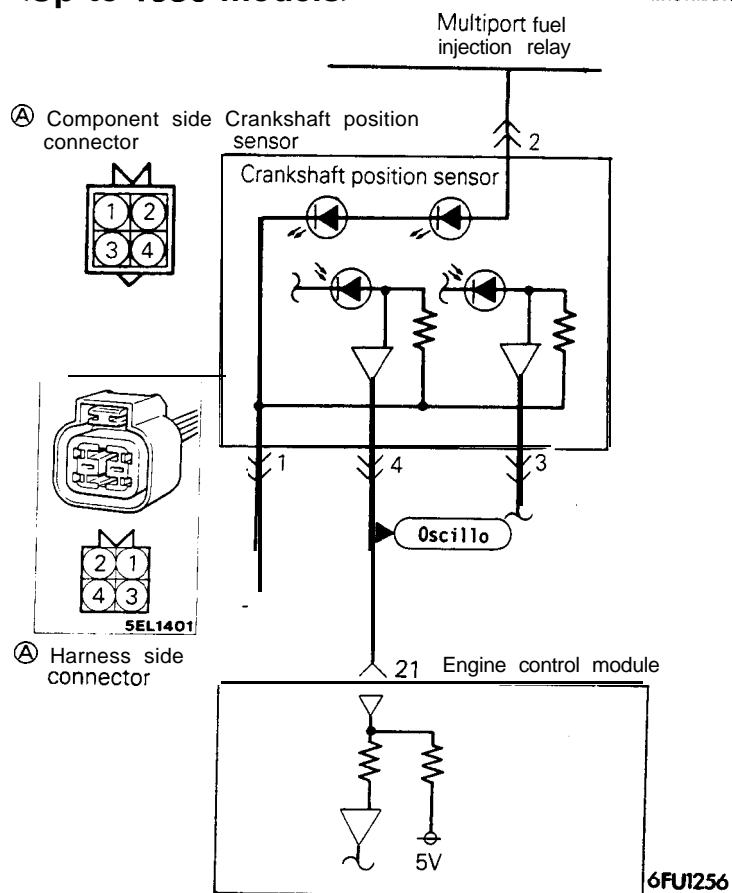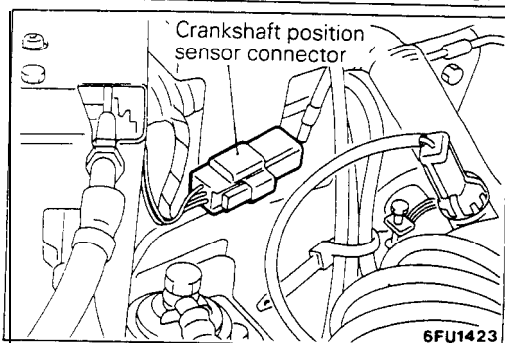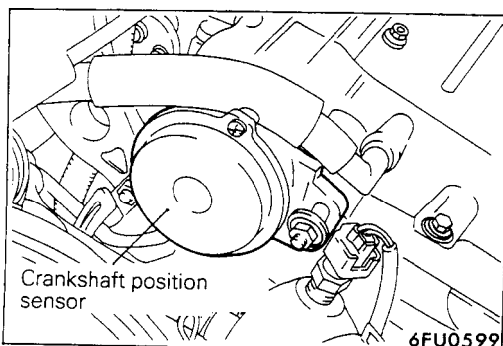

OPERATION

- The crankshaft position sensor functions to detect the crank angle (position) of each cylinder, and to convert those data to pulse signals, which are then input to the engine control module. The engine control module, based upon those signals, calculates the engine rpm, and also regulates the fuel injection timing and the ignition timing.
- The power for the crankshaft position sensor is supplied from the ignition switch-IG and is grounded to the vehicle body. The crankshaft position sensor, by intermitting the flow (to ground) of the 5V voltage applied from the engine control module, produces pulse signals.

TROUBLESHOOTING HINTS**Hint 1:**

If an impact is suddenly felt during driving or the engine suddenly stalls during idling, try shaking the crankshaft position sensor during idling.

If the engine stalls, the cause may be presumed to be improper or incomplete contact of the crankshaft position sensor's connector.

Hint 2:

If the crankshaft position sensor output rpm is 0 rpm during cranking when the engine cannot be started, the cause may be presumed to be a malfunction of the crankshaft position sensor or a broken timing belt.

Hint 3:

If the indicated value of the crankshaft position sensor output rpm is 0 rpm during cranking when the engine cannot be started, the cause may be pre-

sumed to be a failure of the ignition coil's primary current to intermittently pulse correctly, so a malfunction of the ignition system circuitry, the ignition coil and/or the power transistor is the probable cause.

Hint 4:


If idling is possible even though the crankshaft position sensor indicated rpm is a deviation from the standard value, the cause is usually a malfunction of something other than the crankshaft position sensor.

Examples:

- (1) Malfunction of the coolant-temperature sensor.
- (2) Malfunction of the idle air control motor.
- (3) Improper adjustment of the standard idling speed.

INSPECTION**Using Scan tool**

Function	Item No.	Data display	Inspection conditions	Description	Normal condition
Data reading	22	Cranking rpm	· Engine: Cranking · Tachometer connection (Check intermittent flow of ignition coil primary current by tachometer.)	Compare cranking rpm and scan tool indicated rpm.	Both agree.
Function	Item No.	Data display	Inspection conditions	Engine coolant temp.	Standard value
Data reading	22	Idling rpm	· Engine: Idling · Closed throttle position switch: ON	At -20°C (-4°F)	1,450-1,700 rpm
				At 0°C (32°F)	1,350-1,600 rpm
				At 20°C (68°F)	1,180-1,450 rpm
				At 40°C (104°F)	1,000-1,250 rpm
				At 80°C (176°F)	650-850 rpm <Non-Turbo> 700-900 rpm <Turbo>

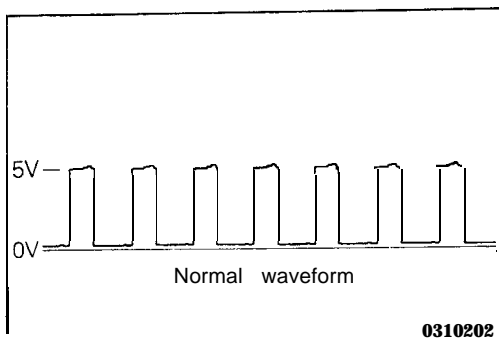**Using Oscilloscope**





- (1) Run the engine at an idle speed.
- (2) Connect the probe to the oscilloscope pick-up point as shown in the circuit diagram, and check the waveform.

HARNESS INSPECTION

<div style="border: 1px solid black; padding: 5px; width: 40px; float: left; margin-bottom: 10px;">1</div> <p style="text-align: center;">Harness side connector</p> <p style="text-align: right; font-size: small;">01A0512</p>	<p>Measure the power supply voltage:</p> <ul style="list-style-type: none"> · Connector: Disconnected · Ignition switch: ON <div style="border: 1px solid black; padding: 5px; margin: 10px auto; width: 80%; text-align: center;"> Voltage (V) Battery positive voltage </div> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <div style="border: 1px solid black; border-radius: 50%; width: 40px; height: 40px; line-height: 40px; margin: 0 auto;">OK</div> <div style="font-size: 24px;">→</div> </div> <div style="text-align: center;"> <div style="border: 1px solid black; border-radius: 50%; width: 40px; height: 40px; line-height: 40px; margin: 0 auto;">✗</div> <div style="font-size: 24px;">→</div> </div> </div>	<div style="border: 1px solid black; padding: 5px; width: 40px; float: left; margin-bottom: 10px;">2</div> <p>Repair the harness. (A2) — Multi-port fuel injection relay</p>
<div style="border: 1px solid black; padding: 5px; width: 40px; float: left; margin-bottom: 10px;">2</div> <p style="text-align: center;">Harness side connector</p> <p style="text-align: right; font-size: small;">01A0513</p>	<p>Check for continuity of the ground circuit.</p> <ul style="list-style-type: none"> · Connector: Disconnected <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <div style="border: 1px solid black; border-radius: 50%; width: 40px; height: 40px; line-height: 40px; margin: 0 auto;">OK</div> <div style="font-size: 24px;">→</div> </div> <div style="text-align: center;"> <div style="border: 1px solid black; border-radius: 50%; width: 40px; height: 40px; line-height: 40px; margin: 0 auto;">✗</div> <div style="font-size: 24px;">→</div> </div> </div>	<div style="border: 1px solid black; padding: 5px; width: 40px; float: left; margin-bottom: 10px;">3</div> <p>Repair the harness. K&III-Ground)</p>
<div style="border: 1px solid black; padding: 5px; width: 40px; float: left; margin-bottom: 10px;">3</div> <p style="text-align: center;">Harness side connector</p> <p style="text-align: right; font-size: small;">01L0407</p>	<p>Check the voltage of the output circuit.</p> <ul style="list-style-type: none"> · Connector: Disconnected · Ignition switch: ON <div style="border: 1px solid black; padding: 5px; margin: 10px auto; width: 80%; text-align: center;"> Voltage (V) 4.8–5.2 </div> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <div style="border: 1px solid black; border-radius: 50%; width: 40px; height: 40px; line-height: 40px; margin: 0 auto;">OK</div> <div style="font-size: 24px;">→</div> </div> <div style="text-align: center;"> <div style="border: 1px solid black; border-radius: 50%; width: 40px; height: 40px; line-height: 40px; margin: 0 auto;">✗</div> <div style="font-size: 24px;">→</div> </div> </div>	<div style="text-align: center; margin-bottom: 10px;"> <div style="border: 1px solid black; width: 30px; height: 30px; margin: 0 auto; display: flex; align-items: center; justify-content: center;"> <div style="border-top: 2px solid black; width: 100%;"></div> </div> <p>STOP</p> </div> <p>Repair the harness. (A4) — (21)</p>

CRANKSHAFT POSITION SENSOR <From 1991 models>

M13YMA81

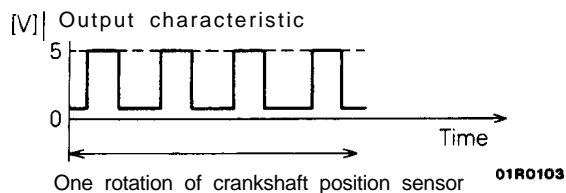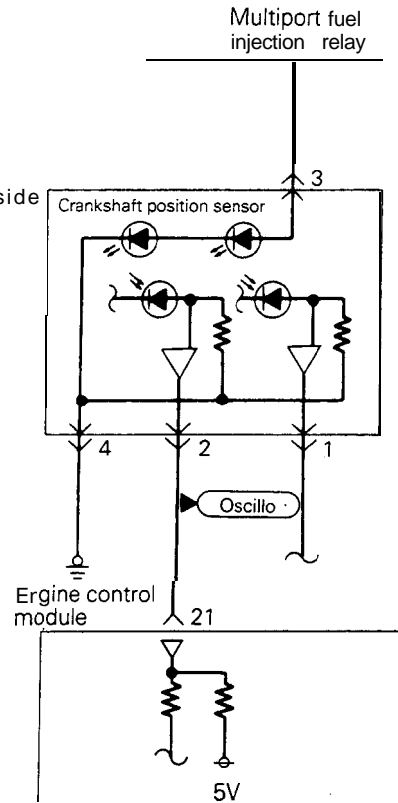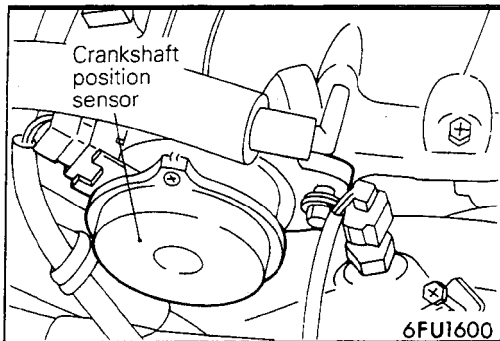

7FU0499

OPERATION

TROUBLESHOOTING HINTS

INSPECTION-Using Scan tool

INSPECTION-Using Oscilloscope

Refer to P.13-281.

HARNESS INSPECTION

1

@Harness side connector

7FU0496

Measure the power supply voltage.
 . Connector: Disconnected
 Ignition switch: ON



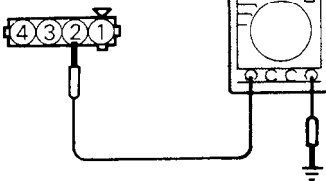


Voltage (V)
Battery positive voltage

OK

✗

→ **2**

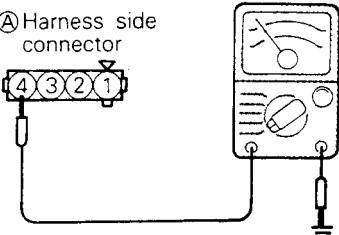Repair the harness.
 (A3)-Multiport fuel injection relay)

<div>2</div> <div>Ⓐ Harness side connector</div>  <div>7FU0497</div>	<div>Check for continuity of the ground circuit.</div> <div>. Connector: Disconnected</div> <div><div>OK</div><div></div></div>	<div>3</div> <div>Repair the harness. (Ⓐ4 - Ground)</div>		
<div>3</div> <div>Ⓐ Harness side connector</div>  <div>7FU0501</div>	<div>Check the voltage of the output circuit.</div> <div>. Connector: Disconnected</div> <div>. Ignition switch: ON</div> <div><table><tr><th>Voltage (V)</th></tr><tr><td>4.8 - 5.2</td></tr></table></div> <div><div>OK</div><div></div></div>	Voltage (V)	4.8 - 5.2	<div></div> <div>Repair the harness. (Ⓐ2 - 21)</div>
Voltage (V)				
4.8 - 5.2				

IGNITION SWITCH-ST

M13YNAAa

Refer to P.13-77.

IGNITION SWITCH-ST AND PARK/NEUTRAL POSITION SWITCH

M13Y0Ac

Refer to P.13-78.

VEHICLE SPEED SENSOR

M13YPAAa

Refer to P.13-80.

POWER STEERING PRESSURE SWITCH

M13YQAAa

Refer to P.13-81.